

Enjoy it.

TABLET PC **ENDEAVOUR 101G**



Manual Tablet PC ENDEAVOUR 101G

Android Ver. 4.4.2

English

**Thank you for choosing a Blaupunkt product.
A good choice. Of course, we are also after the purchase for you.**

**For technical questions and / or problems, please contact us by phone
under 0511/270 496 90 or email at support@first-servicecenter.de**

**Manuals for other languages as well as detailed instructions are available for
download also on www.blaupunkt.de**

Meaning of symbols:



Caution: Improper handling can damage the unit



Beware of potential damage. Please note and remember.



Important information, general information, definitions, general information and pointers etc.

It may be that there is interest in trademarks and trade names, or refer to their products.

The manufacturer disclaims any ownership rights to third party trademarks and trade names.

The user manual can be changed without prior notice.

Any reproduction without written permission of the manufacturer is strictly prohibited.

Product illustrations contained in this manual are for guidance only.

Depending on your Tablet PC, it may be that some functions are not changed or only be available (eg, Camera, Bluetooth, 3G, etc.).

Content

 
Meaning of symbols	3
Content	4
Safety Precautions	6
Product view	7
2. Safe handling of PAD	8
2-1 Touchscreen	8
2-2 Accessories	9
2-3 Further details	9
3. Carraging of PAD	9
<u>Attention!</u>	9
4. Power adapter / power on / off	10
4-1 Connecting the power adapter	10
4-2 Enable / disable of PAD	10
5. System operation	10
5-1 Installation guide	11
5-2 System language change	11
5-3 Main screen	12
5-4 App menu	14
5-5 Screen keyboard	15
6. System settings	15
6-1 Wireless and network	15
6-1-1 Flight mode	15
6-1-2 Wi-Fi	16
6-1-3 Portable Hotspot	17
6-1-4 Bluetooth	19
6-1-5 Mobile networks	20
6-1-6 Data usage	23
6-2 Sounds	23
6-3 Display	24
6-4 Storage	24
6-5 Battery	24
6-5 Apps	24
6-7 Location	24
6-8 Security	25
6-9 Language & input	25

6-10 Back up & reset	25
6-11 Add account	25
6-12 Date and time	25
6-13 Accessibility	25
6-14 Printing	25
6-15 About tablet	25
7. Filemanagement	25
7-1 Select individual files or folders	27
7-2 Back from the folders	28
8. Communication	29
8-1 Google account	29
8-2 Browser	30
8-3 Contacts	30
8-4 E-Mail	32
9. Fun	35
9-1 Camera	35
9-2 Gallery	36
9-3 (Google) Play Music	37
9-4 Connecting headphones	39
10. System connection	40
10-1 Connection to PC	40
11. Attachment	40
11-1 Troubleshooting	40
11-2 Specifications	41
Declaration of conformity	43

Safety Precautions

1. Keep the Tablet-PC/PAD NOT together with small items, because they will scratch the screen or enter the PAD.
2. Set the PAD from NOT a dirty or dusty environment. Maintain a clean and dry environment.
3. Place the PAD NOT on uneven or unstable work surface.
4. DO NOT place things on the PAD and let nothing fall for it. Slide NO foreign objects into the PAD. Cover the touch screen / screen NOT with materials that have a rough surface.
5. Do not expose the PAD strong magnetic or electric fields. DO NOT put disks in the vicinity of the PADs, otherwise the data may be lost to it.
6. Let the PAD NOT lie in the sun / hot environment, especially in the car because the screen can be damaged.
7. TEMPERATURE: This PAD may only be operated in environments with average between 5 ° and 35 ° C.
8. Use the PAD NOT near liquids, rain or moisture.
9. Take the PAD NOT in the trash. Dispose of electronic products in accordance with local regulations.
10. The PAD and the AC adapter may become warm during operation or charging. Let the PAD NOT lie on your lap or other body parts in order to avoid any injury from heat.
11. INPUT POWER: Make taking into account – the label on the PAD that the power supply to the power input matches. Use only manufacturer-approved accessories
12. Check the connections between the main unit and the accessories attached before turning on the PAD.
13. Use the PAD NOT while eating, to avoid contamination of the unit.
14. Do NOTHING in the PAD, this may cause a short circuit and damage the circuit.
15. Disconnect the PAD from the power supply before attempting to clean it. Keep the device away from children also.
16. Install the PAD NOT apart. Repairs to your PAD may only be made by professionals. Otherwise, it may result in accidents, for which the manufacturer is not liable. The warranty does not pay attention at.

1. Product view

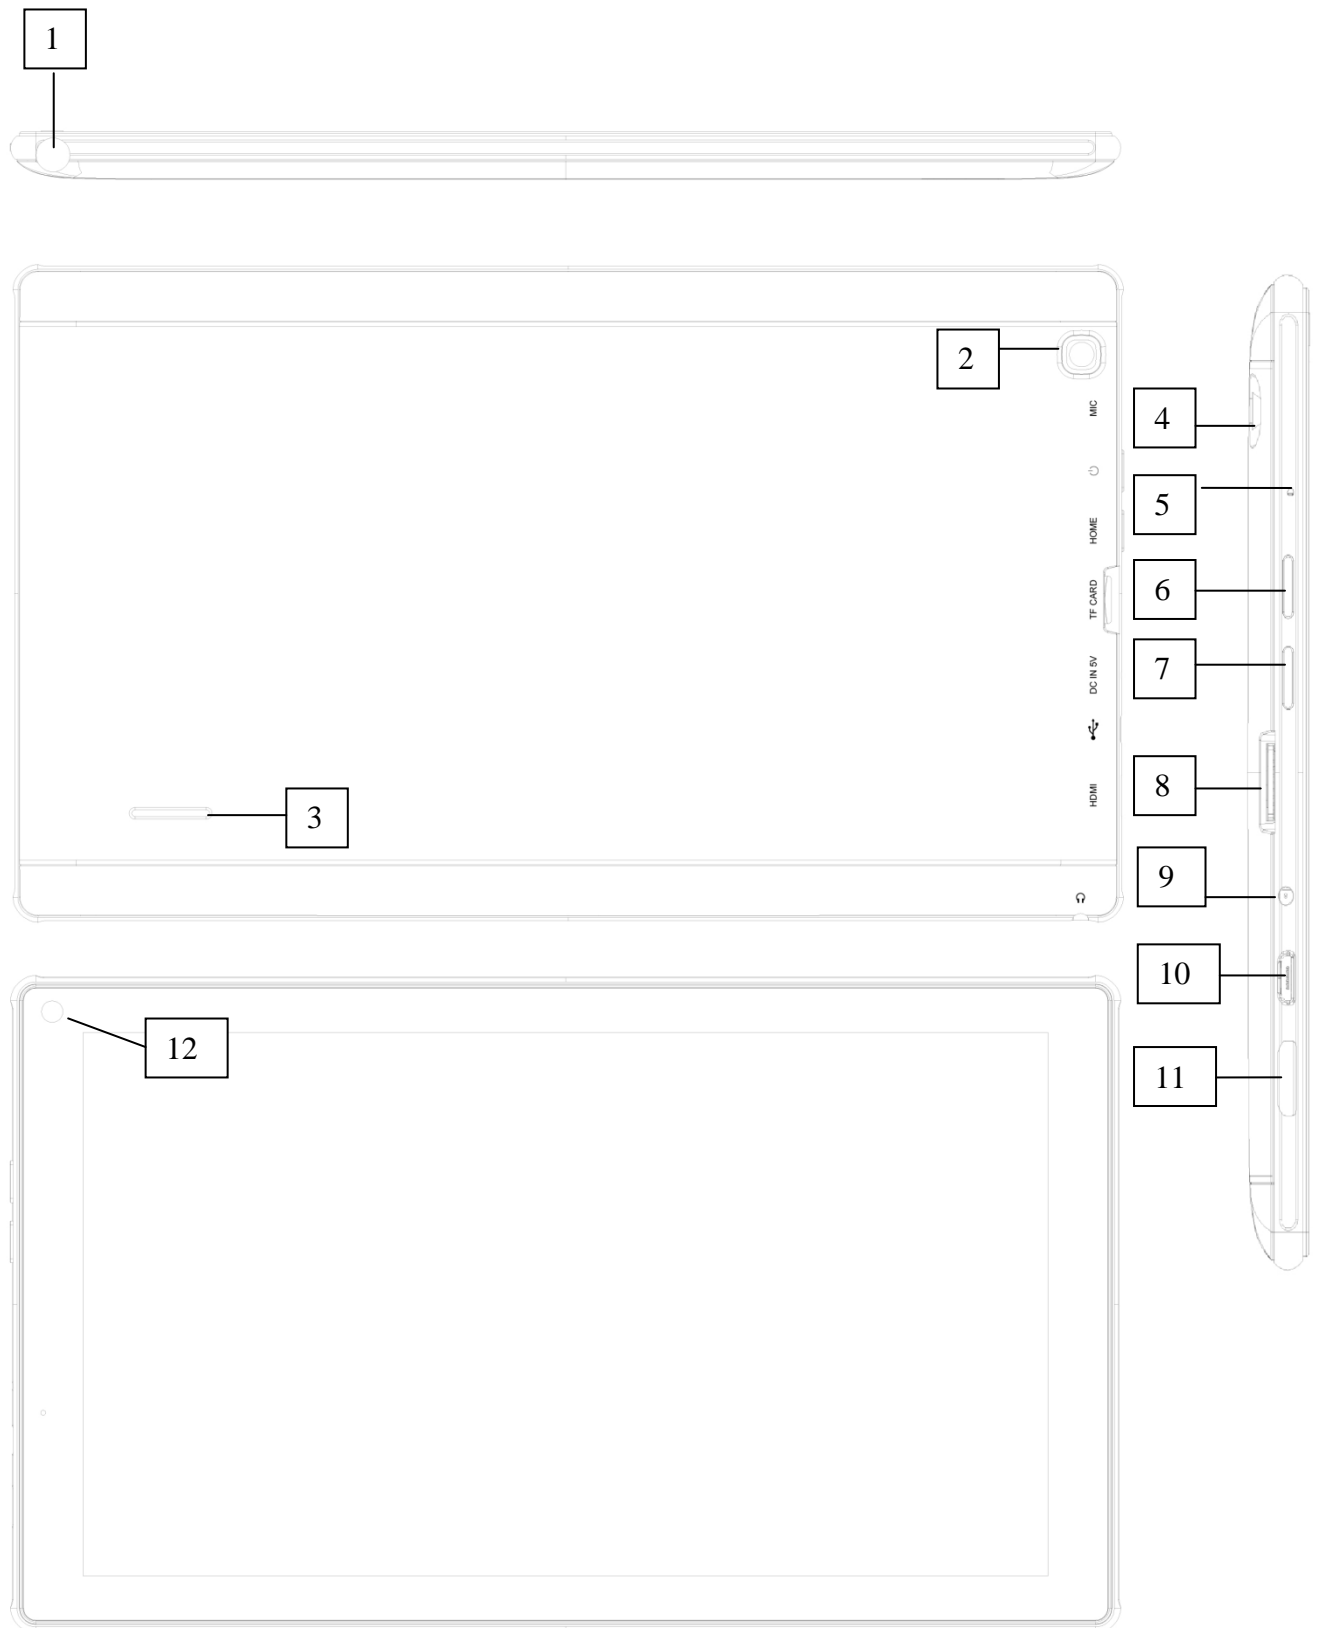

-
- 1.) Headphone jack (3,5 mm)
 - 2.) Rear camera
 - 3.) Speaker
 - 4.) Rear camera
 - 5.) Microphone
 - 6.) On / Off button
 - 7.) Home
 - 8.) Micro SD (bis max. 32 GB)
 - 9.) DC jack
 - 10.) Micro USB
 - 11.) Mini HDMI
 - 12.) Front camera

2. Safe handling of PAD

The PAD is a precision instrument. Improper use can result in equipment damage.

2-1 Touchscreen

- ✧ The touch screen is the most sensitive component of the PADs and is made of glass. DO NOT scratch the screen of PAD, the scratches can't be removed.
- ✧ DO NOT cover the screen to / in order to avoid scratches or other damage.
- ✧ Insert any objects on the unit to prevent damage to the screen and the device, even not to cover.
- ✧ Do not carry your PAD in an appropriate carrying case to protect it from dirt, water, shock and scratches.
- ✧ DO NOT drop place heavy objects on the screen and do not put anything on it.
- ✧ Ensure scratch to the screen NOT use your fingernail or anything hard.
- ✧ When cleaning your PAD a soft, fiber-free cloth and gently wipe over it, to prevent damage to the touch screen.
- ✧ Power the PAD off when not using the unit for some time.
- ✧ Do NOT use chemical cleaners to clean the touchscreen.
- ✧ Make sure that the touchscreen NOT use hard objects such as buttons, rings or watches, etc. come in contact.
- ✧ Spilling NO liquids on the PAD, otherwise the device will be damaged.



Clean the touchscreen NOT with caustic cleaners and spray cleaning spray NOT directly to the PAD.

2-2 Accessories

Stick to the following steps before you clean your PAD or accessories.

1. First Turn off the PAD. Disconnect, the mains supply from your PAD and any external devices.
2. Second moisten a soft, lint-free cloth with water and wipe it gently across the surface of your PADs. DO NOT spill water on the unit to avoid electric shock or damage the device.
3. Turn the pad on only when it is dry.

2-3 Further details

1. First Let the PAD NOT lie in hot environments, especially not in the car. Otherwise it may be that parts of the device become deformed.
2. Keep this information in order to access any future reference.
3. Renew your software regularly to keep your PAD compatible and up to date.
4. To increase the life of the battery, you should charge the PAD every three months, even if you rarely use the device.

3. Carriage of PAD

Turn off the pad and remove before transporting all cables and external devices. Consider the following steps when you want to travel with your PAD.

Attention!

1. Turn off the pad and remove all connectors.
2. Transport the PAD in an appropriate carrying case to protect it from dirt, water, shock and scratches.
3. Make sure that you have a plug adapter, power adapter, user guide and warranty card with you. DO NOT forget the password to your PAD.
4. Ask for the power supply that apply to your destinations. Your PAD is equipped with a universal adapter. So you need to buy only a line cord or ask at your hotel for universal cables that fit your power supply.



If you go by car, leave your PAD NOT lie in the sun. Make sure that your device is in the shade and cool.



The Internet connection of your PADs will be interrupted if the System in the hibernate / sleep mode.

4. Power adapter / power on / off

4-1 Connecting the power adapter

The PAD is equipped with a universal adapter, which is suitable for an input voltage of 100 V to 240 V.

Perform the following steps to connect the adapter:

1. Plug the charger into the socket provided of PADs
2. Plug the AC adapter into the power outlet.

4-2 Enable / disable of PAD

Press the power button for a few seconds to turn the unit on.

Once the device is powered up, you see the start screen.

Press and release the power button to switch to the standby mode. Press the button again to activate the unit.

 
To switch off, press and hold the power button until the pop-up menu appears. Press OK to turn off the PAD.



If the system does not respond, you hold the power about ten seconds to force a power off.

5. System operation

First time you turn on the tablet PC, you need to unlock the screen by dragging the lock icon out of the circle and enter the home screen, which makes it easily for you to access frequently used functions. (Screen can be different due to the model you are using).

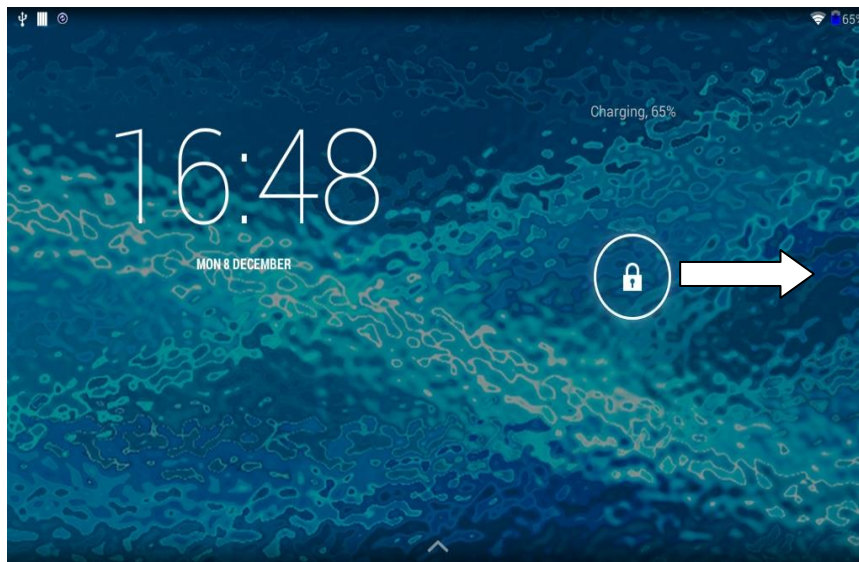

5-1 Installation guide

 
To help you with the initial setup of your Tablet PC, our setup wizard will help you in 5 steps, to set up the first important things (language, date / time, Wi-Fi, screen brightness, and location determination).

If you cancel the wizard, or don't continue until the end, you can always call up the individual settings via the menu to change or set up.


5-2 System language change

If you have canceled or closed the setup wizard, you can change the system language in your own language, eg German as follows.

Open the Settings with a tap on  Press on "Language & input".

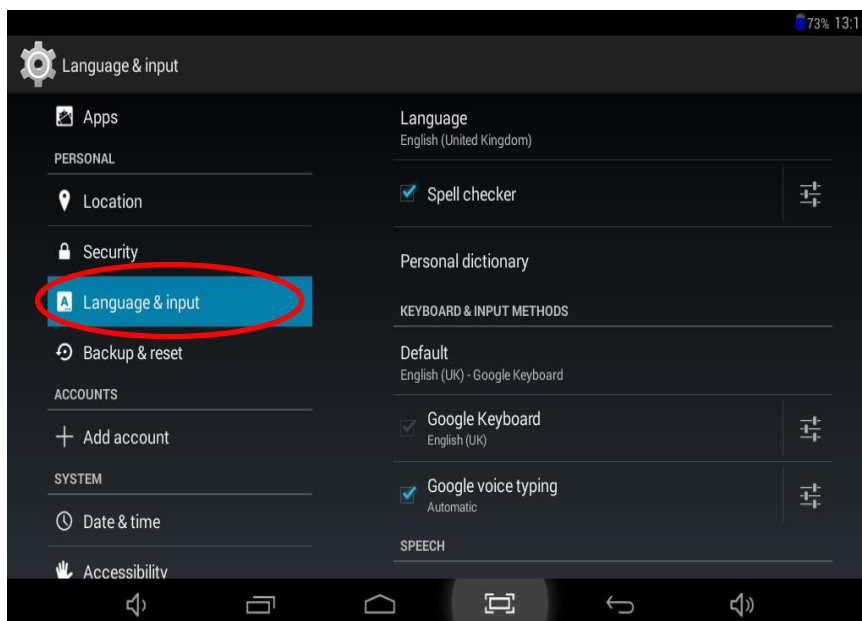

 
Tap on "Language". A list of all available languages opens.

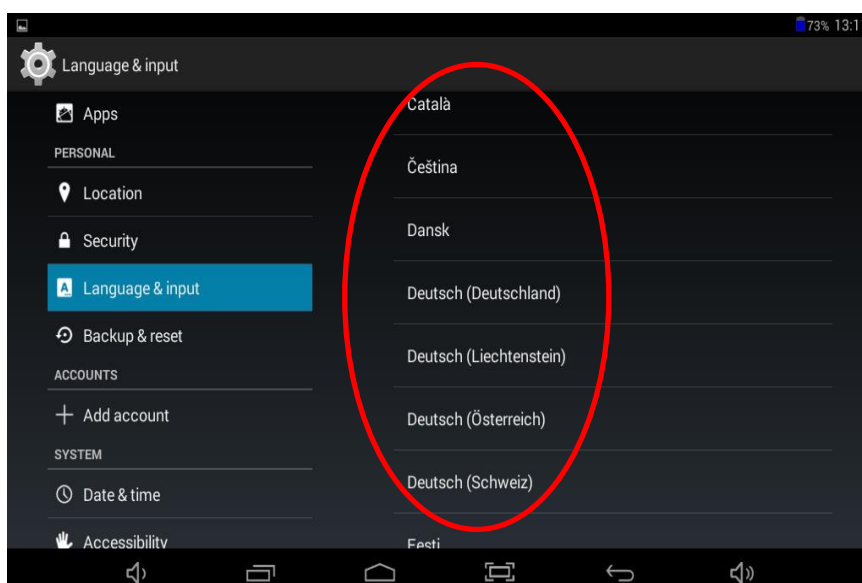

Please choose your preferred language.

You can change the system language at any time from this menu.

 5-3 Main screen

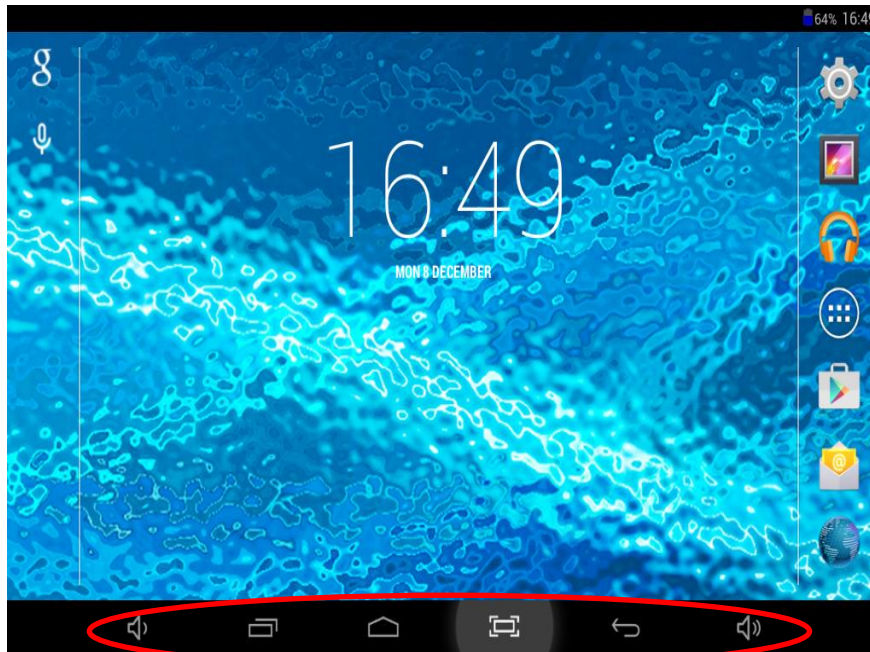

touch to get back to the previous page



Volume - (down) (Picture may vary)



touch to access the home screen



Volume + (up) (Picture may vary)




touch to browse the track record of opened application

 


create screenshot (Picture may vary)





show menu (Picture may vary)

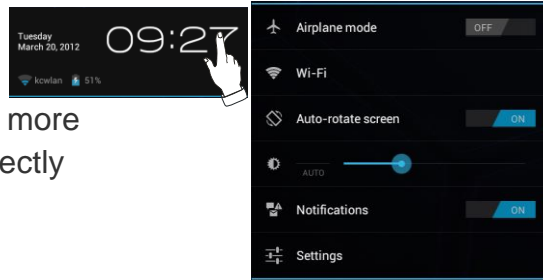Tap the notification bar to obtain more information, and tap  to go directly to the settings.




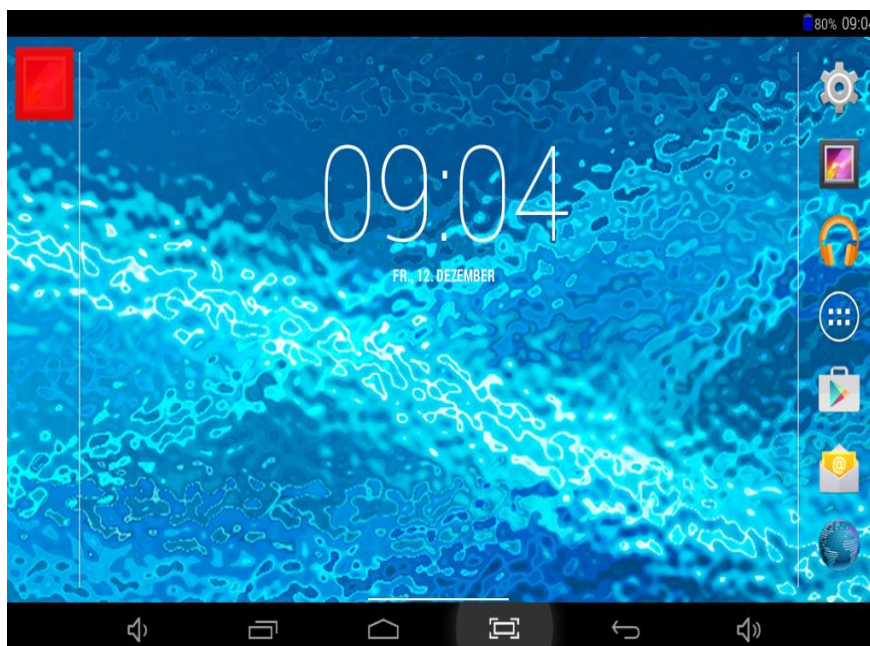 
Add shortcuts to the home screen

Tap on . Then tap the link between the app and drag it to the desired field of the main screen.


Widgets: Tap on  > **Widgets**. Then tap the widget and drag it to the desired field of the main screen.

 
Delete shortcuts from the home screen

Press long on the link to be deleted, until the icon  appears to clear at the top of the screen. Drag the links on this icon until they turn red, and then let go.



5-4 App menu

Tap on the main screen , as shown below in order to Access app menu.

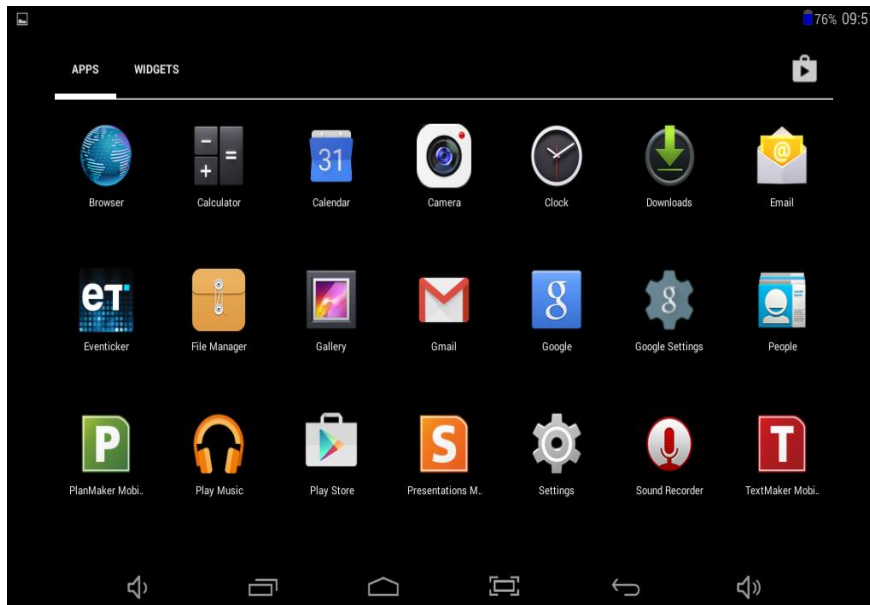

Browser: Internet connection

Calculator: Performs all basic arithmetic operations.

Calender: Date display and add / manage appointments.

Camera: Easy take photos and videos.

Clock: With alarm.

Downloads: The download files are stored

E-Mail: Your E-mail client / account

Eventicker: Is an app that allows you to easily find events in your area. (Internet-based)

File Manager: Overview of the different locations (Device memory, SD card, USB stick)

Gallery: View and manage your photo and video files.

Gmail: E-mail client / account from Google Mail

Google: It's a search engine that can be also operated by voice

Google settings: General Settings for Google Apps

People: Shows your contacts and you can manage them

PlanMaker Mobile: Is the Excel component of SoftMaker Office software.

Play Music: Music and entertainment.

Play Store: Google Marketplace for Android Apps

Presentations Mobile: Is the PowerPoint component of SoftMaker Office software.

Settings: System settings.

Sound Recorder: To generate contacts, locations, etc. via speech

 
TextMaker Mobile: Is the Word component of SoftMaker Office software.


Video: Used to play movies, videos, etc.

VoiceSearch (Google): Quick Google search


YouTube: Is an Internet video platform

5-5 On-Screen keyboard

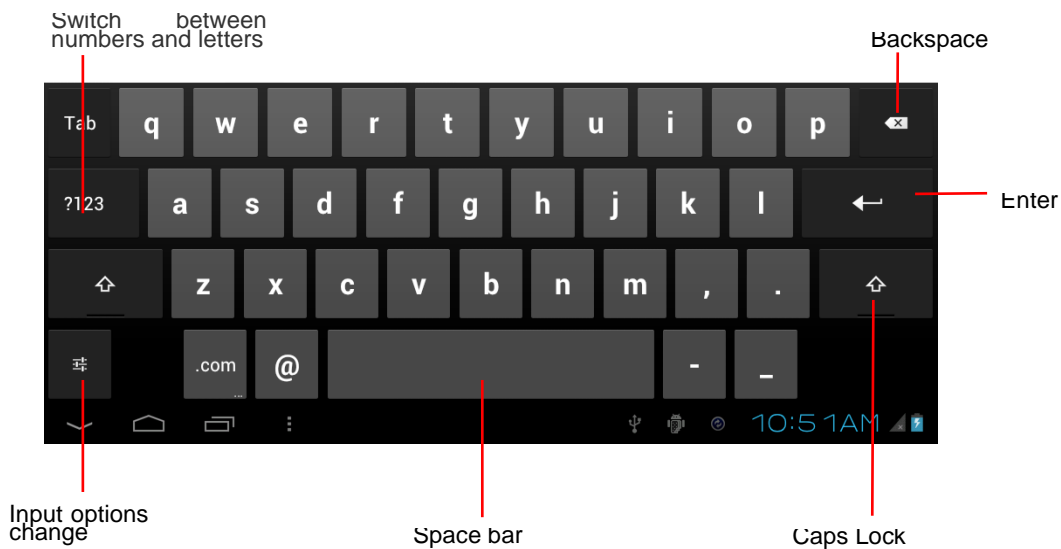

Just tap on a text field to open the on-screen keyboard.
Tap on , to close.

 6. System settings

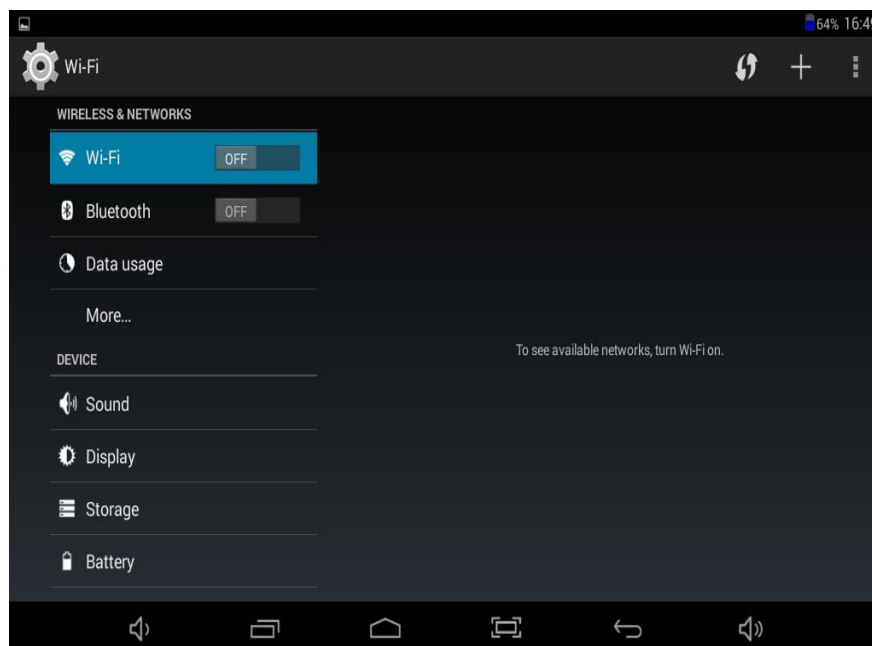


6-1 Wireless and network

6-1-1 Flightmode


Wireless connections such as Wi-Fi and Bluetooth and 3G are thereby deactivated.

6-1-2 WiFi

 
Tap on  > **Settings** > **Wi-Fi** > **OFF** to enable Wi-Fi.

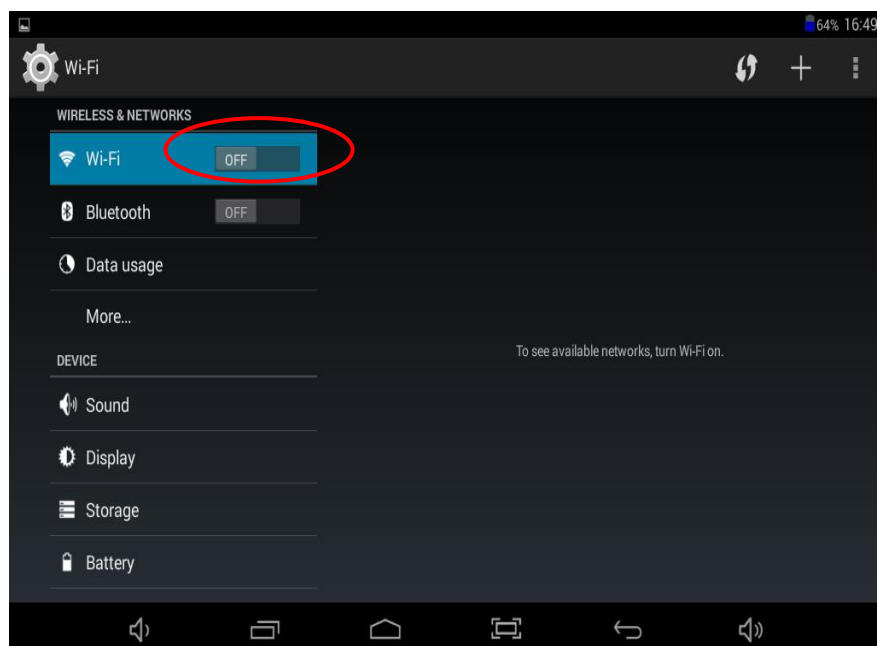

 
Now choose the right list pane, select the wireless network, you want to connect with.

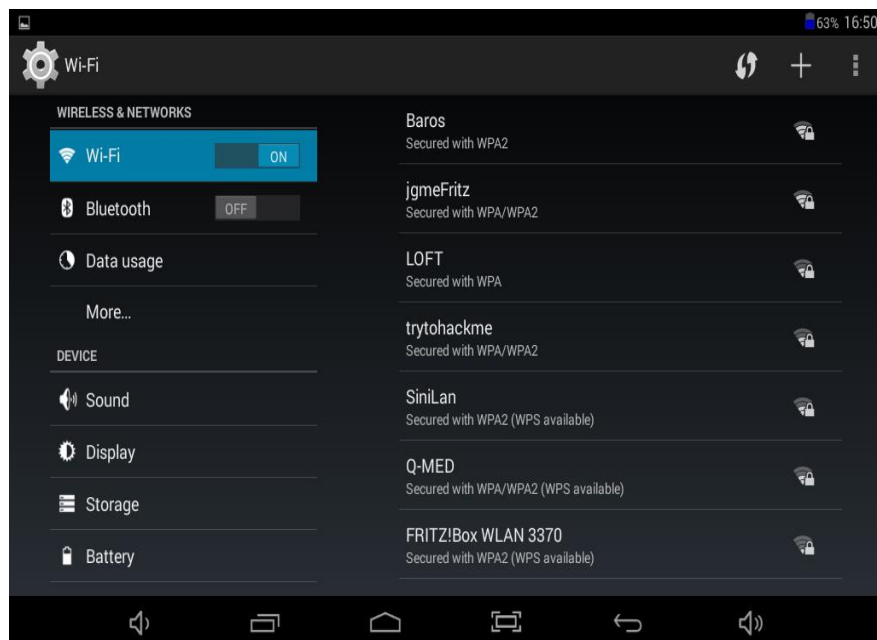

 Enter the required password if necessary.

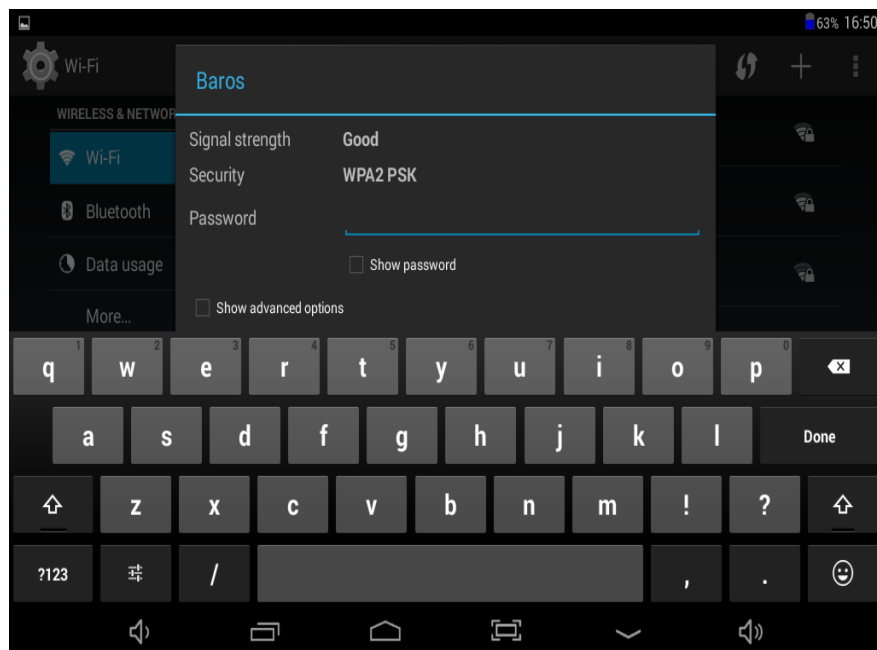

You will get the reception icon  in the lower right of the screen. It also indicates the signal strength. The more segments are blue, the better the reception.





6-1-3 Portable hotspot

 
You can make your PAD Wi-Fi hotspot, the other WiFi-enabled devices serves as a practical portable Internet access point.



 
Ensure a safe access. To protect your PAD and your hotspot from unauthorized access, it is recommended that a security key with a password (WPA2 is the most secure level) to set up.

Perform the following steps to use your pad as a wireless hotspot:

1. Disable the WLAN function:
 >  **Settings** > **WiFi** > **ON/OFF**.
2. Tap on  >  **Settings** > **More...** > **Tethering & portable hotspot**.
3. Tap **Portable Wi-Fi hotspot**, to activate the hotspot feature.

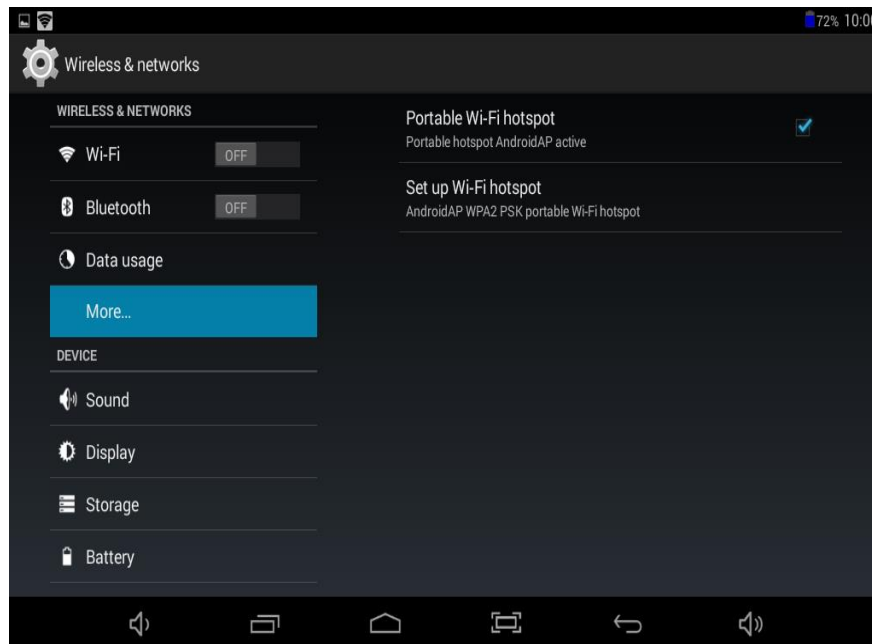


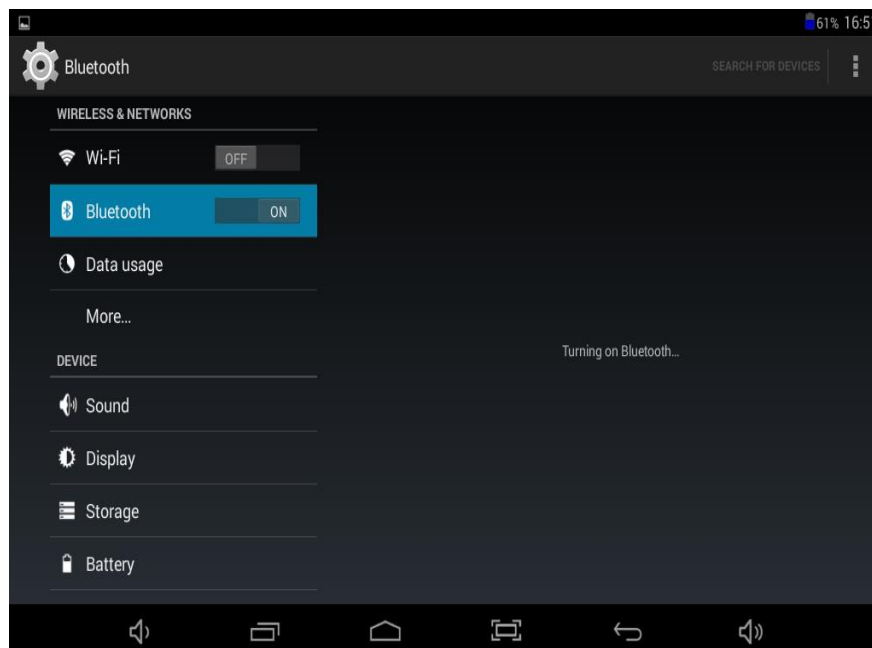 
4. Tap **Set up Wi-Fi hotspot** to change the security configuration:
 - **Network SSID**-Enter a name for your hotspot.
 - Select the **Security-encryption**. If encryption is selected, a password must be set. Other users cannot access your Wi-Fi hotspot, when the correct password is entered.

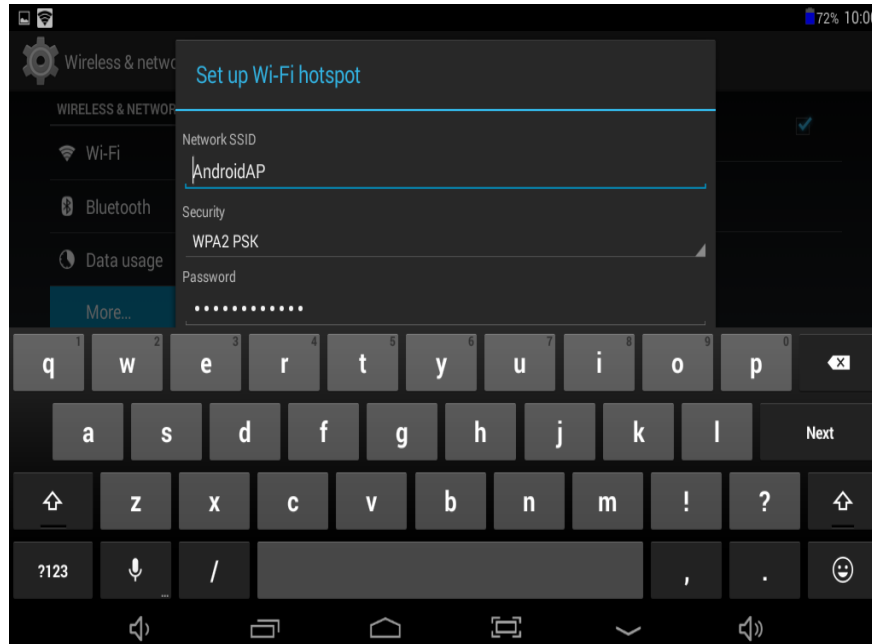


5. Tap **Save** to save the settings. Once your Wi-Fi hotspot is active, other Wi-Fi enabled devices can access it by your hotspot's **SSID** entered, set a **security level** and the correct **wireless password** is entered.
6. Please note that this mode consumes more power. A shorter battery life may be the result.

6-1-4 Bluetooth



Tap on  > Settings > Bluetooth to configure Bluetooth connection.



 After you have Bluetooth enabled, the available devices are searched in the area and possibly displayed below.

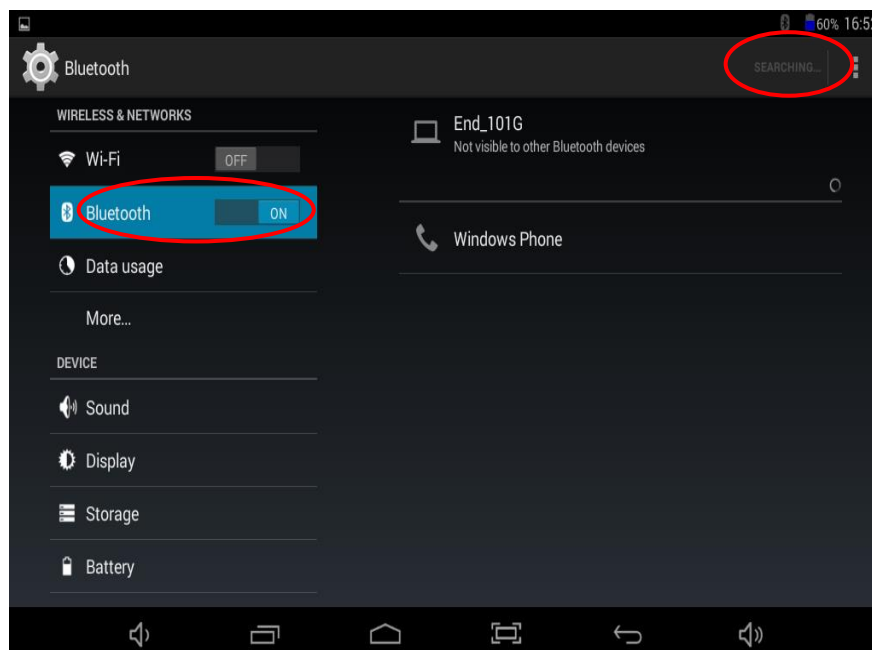

  
After you click on the desired device to the "pairing" (link), you must enter a code / password for the connection normally.

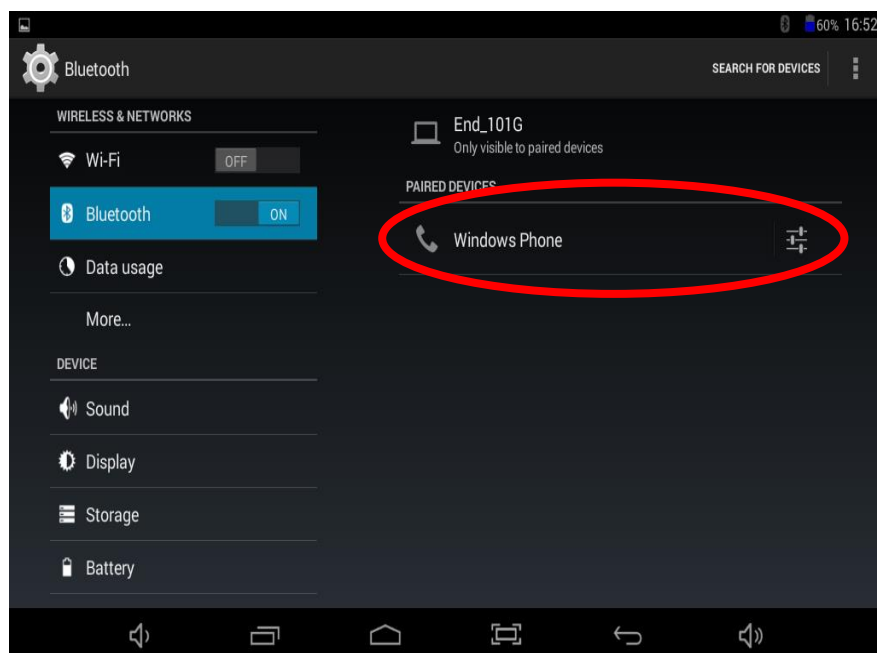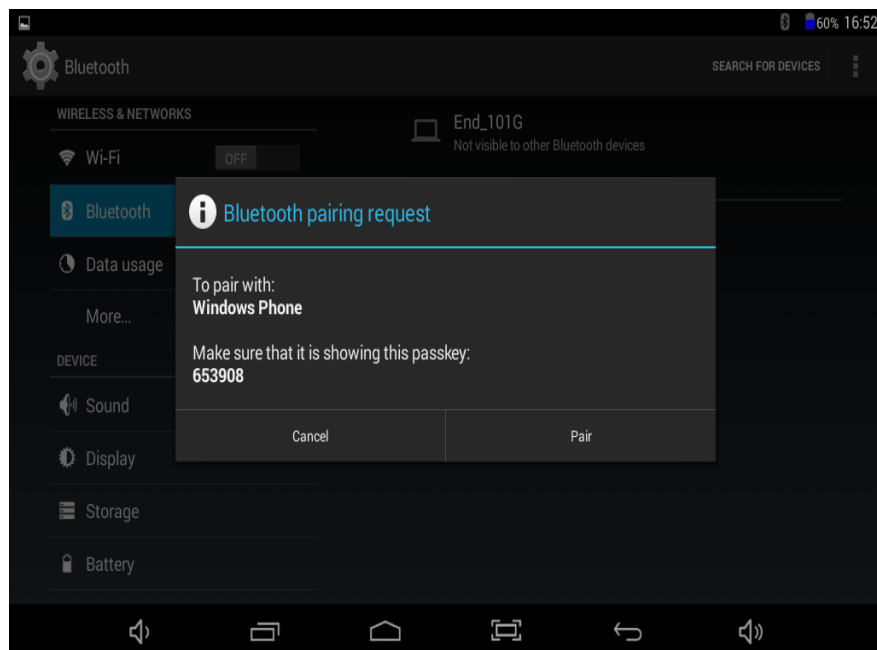


6-1-5 Mobile networks

You can connect your device to an external 3G/UMTS stick to the internet. The 3G/UMTS stick is not included!

 
After connecting the external 3G/UMTS stick, you will be when the SIM PIN is enabled, asked to enter your PIN code. Then you will see in the lower right corner of a 3G icon. Once this appears, you can use the Internet access. If you still need to enter your access provider, please proceed as follows. Go to "**Settings**", choose "**More**" and then tap "**Mobile networks**".

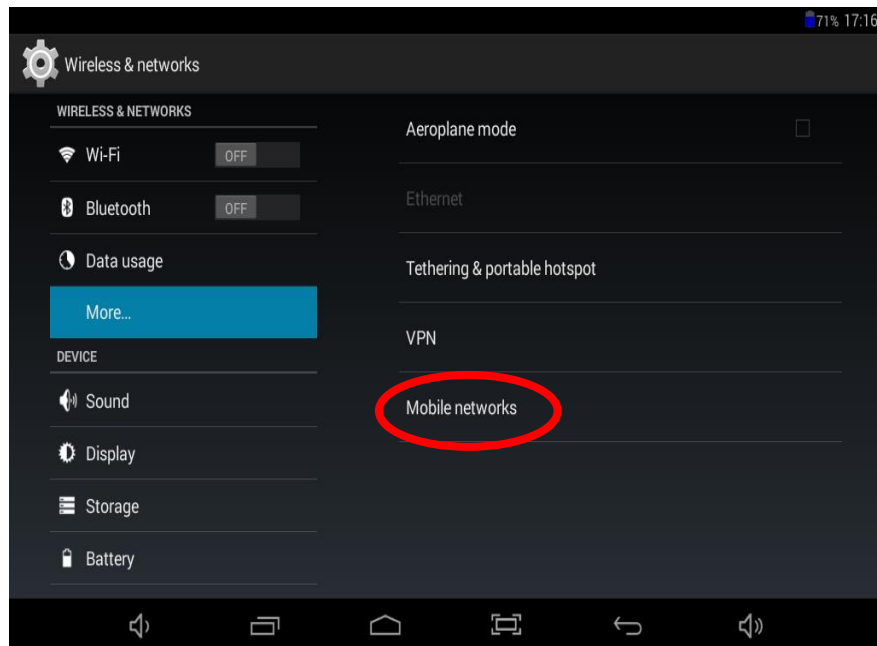


Now tap "Access Point Names".

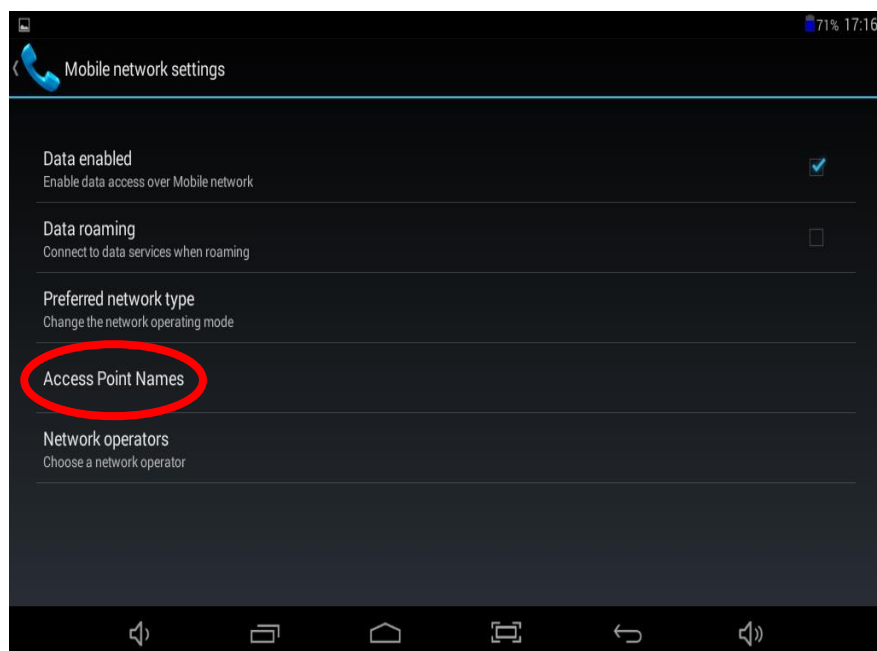 

Now tap the menu icon  on the top right of the screen. Select "New APN"

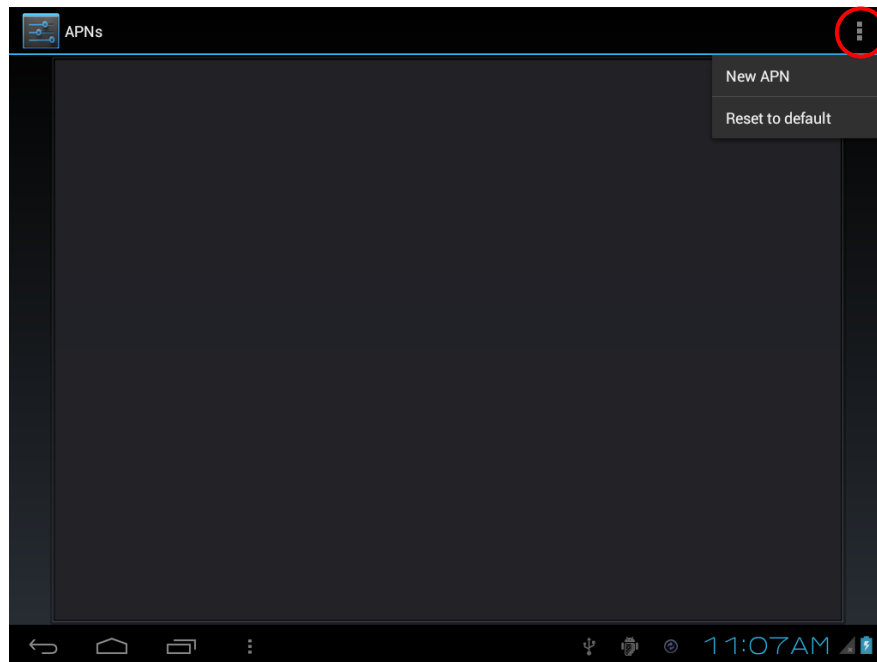 


 Then enter the appropriate data for your ISP. The credentials of the four major network operators (Telecom - Vodafone - E-Plus and O2) in Germany are already stored.

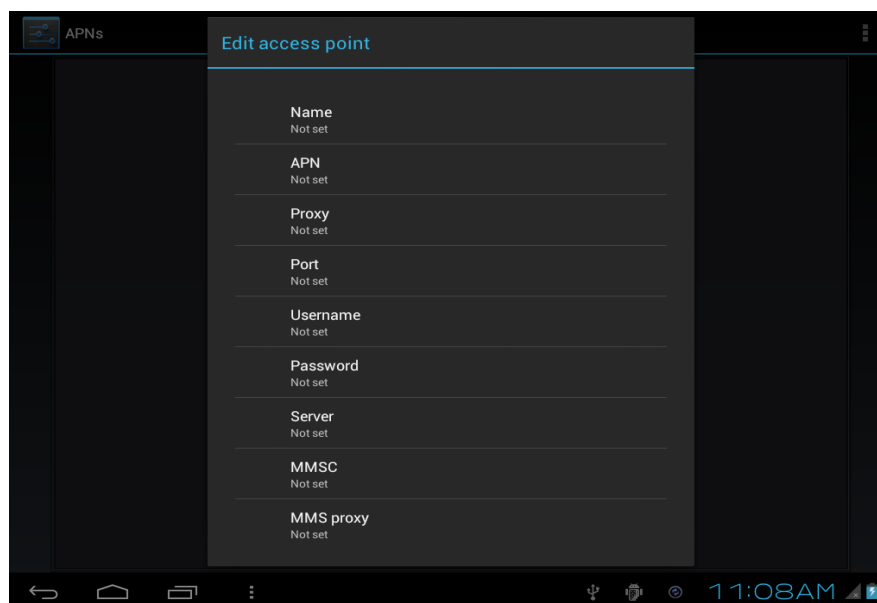


After entering the access points press . Your entries are saved and the device is based on a 3G connection.

 6-1-6 Data usage

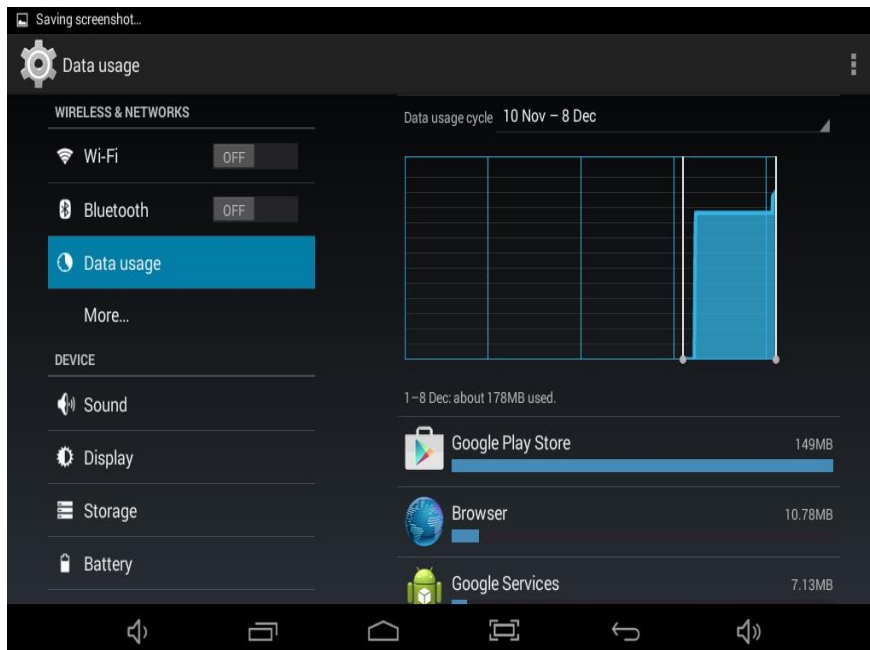

Here you can see the data usage of your **mobile** data usage.

 6-2 Sounds

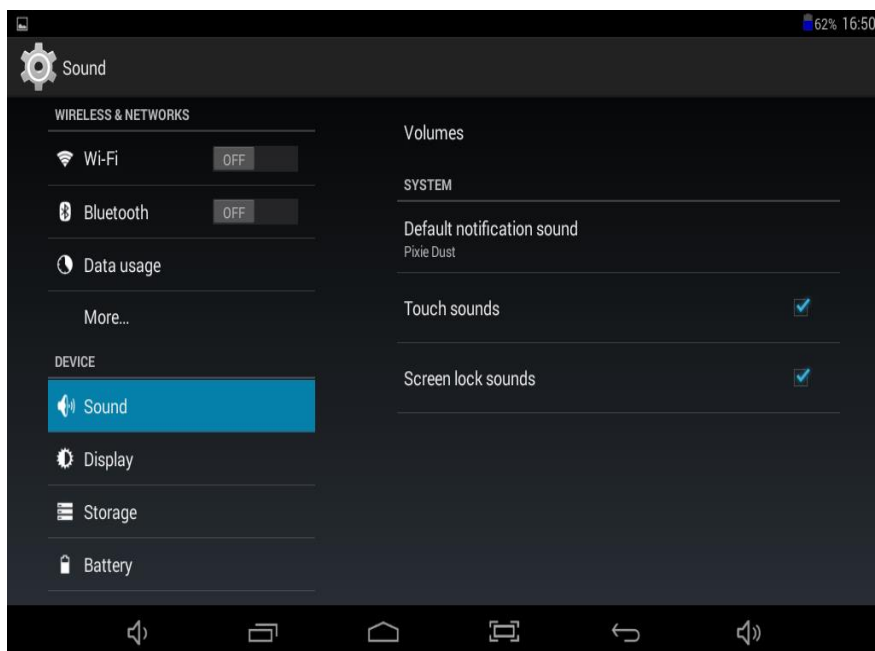


Volumes: Volume for all sounds except media and alarm calls.

Default notification sound: Here you can set the notification sound.

Touch sounds: This opens the tap on the screen and the selection on the screen accompanied by sounds Tip.

Screen lock sounds: Determines whether a tone sounds when the PAD is put into standby mode.

 6-3 Display

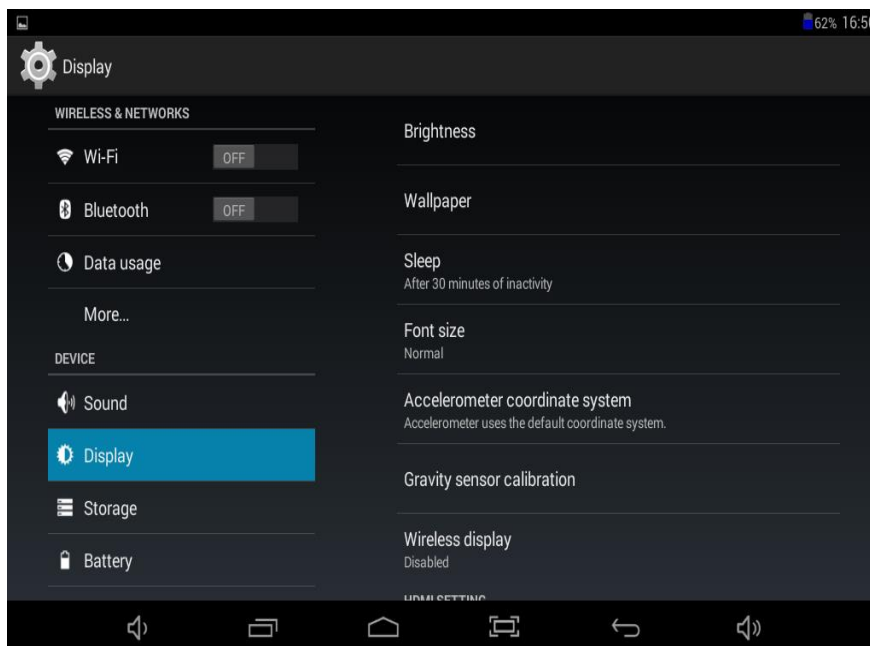

Brightness: This adjusts the brightness of the backlight.

Wallpaper: This feature allows the background image to be changed.

Sleep: Here the time is set, after which the machine should switch to idle.

Font size: Here you can set the font size for the display.

Accelerometer coordinate system: With this function, you can select whether the default settings are used for / the acceleration sensor coordinate system, or special settings for games such as are necessary.

Gravity sensor calibration: This function is used in gravity sensor calibration.

Wireless display: Uses the wireless transmission to other devices.

hdmi full screen mode: Allows the HDMI playback in full screen mode, if enabled.

6-4 Storage

You can check the memory capacity of the unit.

6-5 Battery

Here you can see if the battery is charging, what are the current consumption of each service and how long the battery will still hold.

6-6 Apps

Functions relating to the application.

Here you can stop and delete applications, and manage.

6-7 Location

Here you can specify whether the site Google services to be activated.

6-8 Security

Set a screen lock and configure the use of passwords.

6-9 Language & input

Select the region to display its language, as well as the input method for the on-screen keyboard. You can also add or remove user dictionaries.

6-10 Backup & reset

Here you can reset the device to factory settings.

6-11 Add account

Managing user accounts and automatic data synchronization.

6-12 Date & time

Here you can set or change the date, time, and time zone of the system.

6-13 Accessibility

Universal Access can be set up here.

6-14 Printing

Here you can search through the browser or the Google Play Store, the required printer and install app to use eg also be able to print via WiFi.

6-15 About tablet

 
System information for PAD.

7. File management

To manage your files File Manager is preinstalled. Using the File Manager, you can move your data, copy, delete, etc.

Once opened, you will see the different tabs with the internal and external memory, called internal storage, external Sdcard or USB. Now select the location from where you want to work.


Internal Storage:

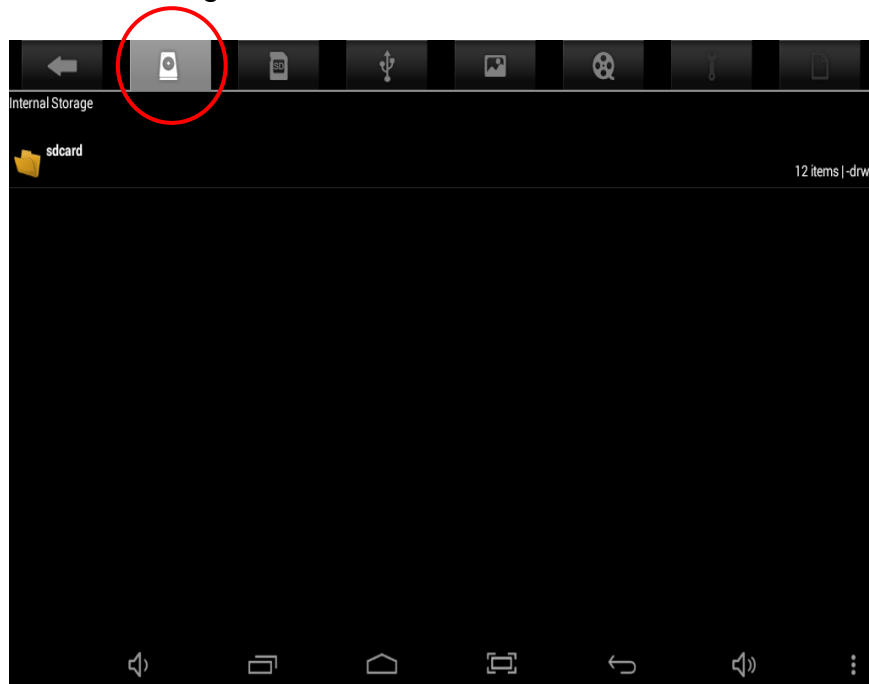


Here are all stored in the machine data and system files.


Or the external memory - "External sdcard or USB." Here you will find all your files that are stored on your memory card or USB flash drive.

 
External Sdcard:

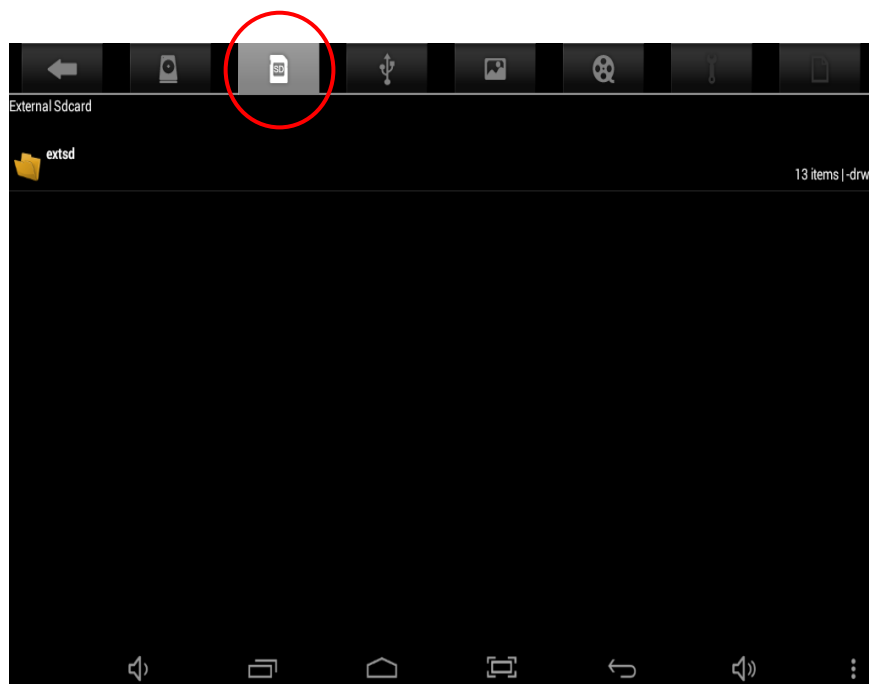

USB:

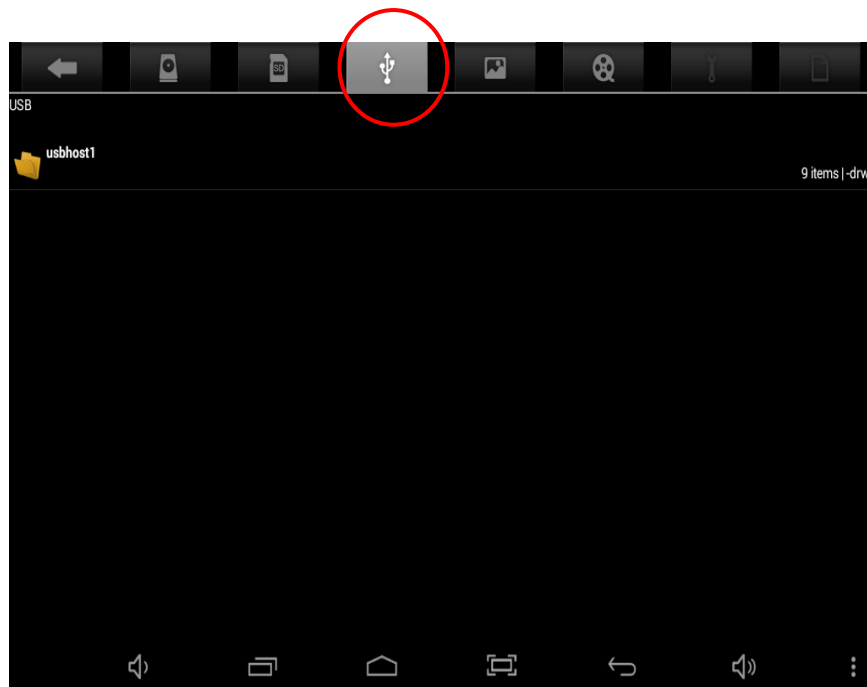 


 In this folder you will find all the external storage device (USB flash drive or SD card) stored images.

 In this folder you will find all the external storage device (USB flash drive or SD card) stored video.


7-1 Auswahl einzelner Dateien oder Ordner

 Wenn Sie einzelne Dateien oder Ordner auswählen wollen, öffnen Sie das jeweilige Verzeichnis, in dem sich die gewünschte Datei befindet. Sobald Sie dann den Finger etwas länger auf der gewünschten Datei oder dem Ordner gedrückt halten, öffnet sich das folgende Bearbeitungskontextmenü.

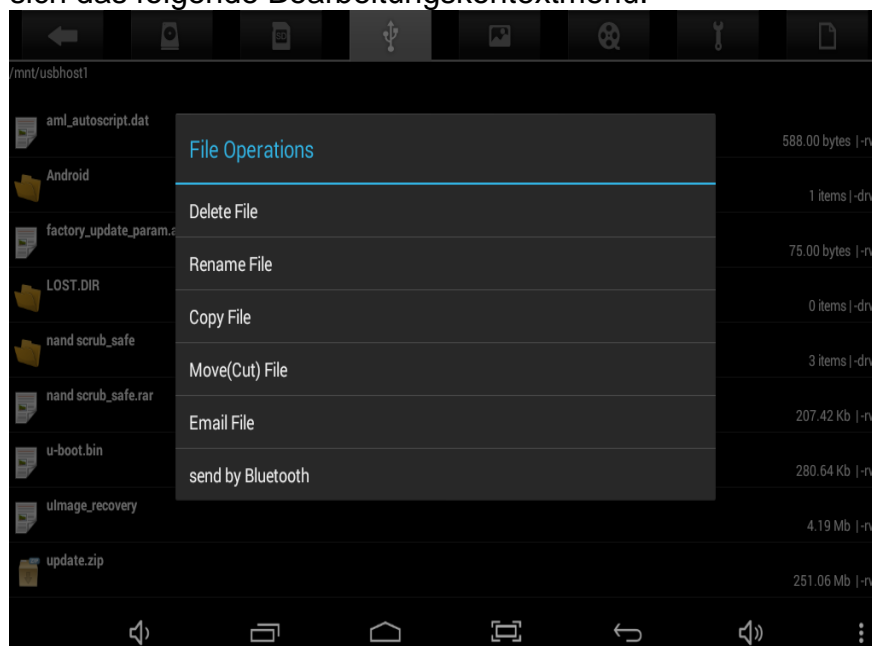

Here you have the following options for editing:

 
- Delete File: to delete the respective file or folder
- Rename File: Rename each file / folder
- Copy File: to copy the respective file or folder
- Move (Cut) File: to cut each file / folder
- Email File: To send the respective file by email
- Send by Bluetooth: To send the respective file using Bluetooth

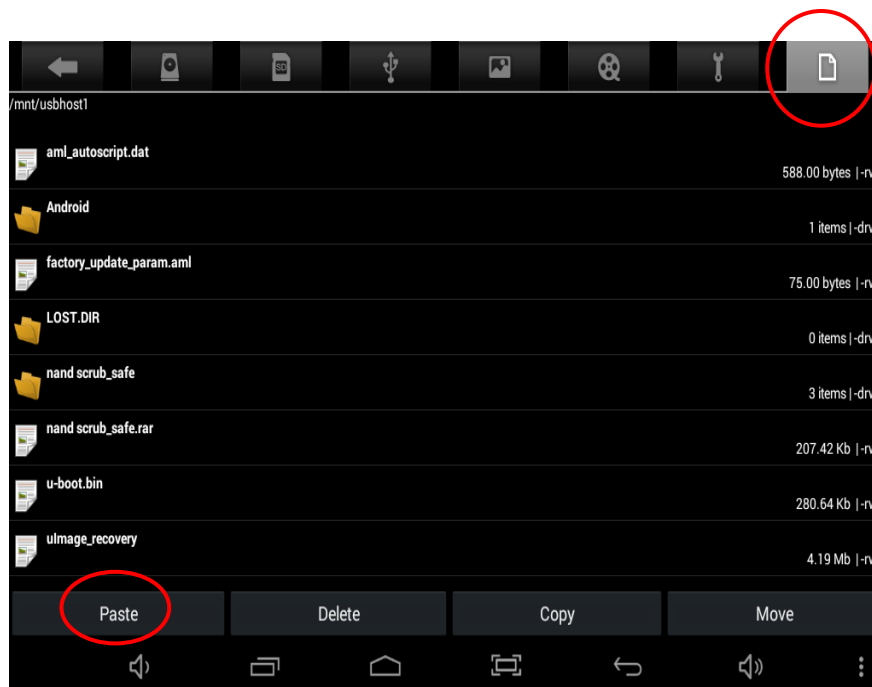


Example:

So if you cut from your memory card a file with "Move (Cut) File" and then want to paste it in the folder "internal storage", click on the last tab (paper) and in the local context menu, click "Paste".

7-2 Back from the folders

 If you move into each folder and then return back into a previous folder, you can do this with .

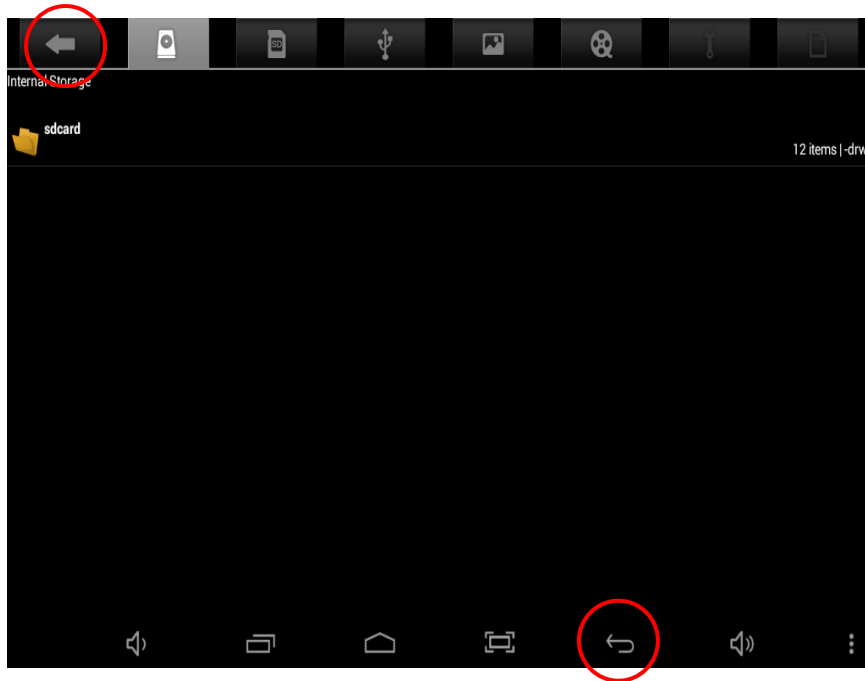

With the lower curved arrow close the file manager and return to the main menu.



 
Attention! Do not change or delete any data in the internal memory. This could lead to a malfunction of the operating system and the loss of guarantee of manufacturer.

8 Communication

8-1 Google account

Some features require a Google account, such as the Google Play Store. With other programs, it is possible to connect it to a Google account eg Contacts.

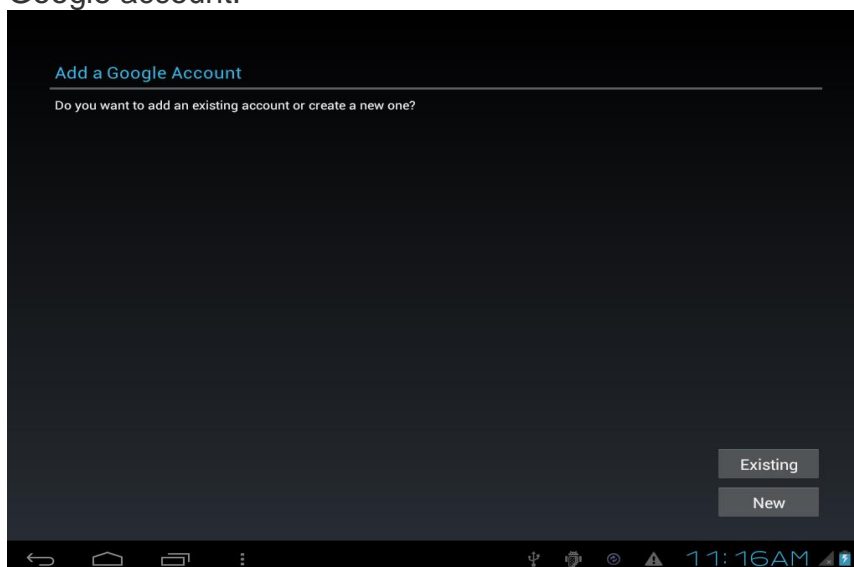

If one of these programs are used for the first time, you are prompted to create a Google account.

 


Here you have the option to sign in with an existing Google account or create a new account.

For programs that do not necessarily need a Google account, you can skip the registration procedure with the item "Not now". You can connect later that particular program with a Google account.

8-2 Browser


Tap the Browser icon , after a network connection is established, you can access the browser. Alternatively, you can also click  **bookmark symbol**, to go directly to a website.

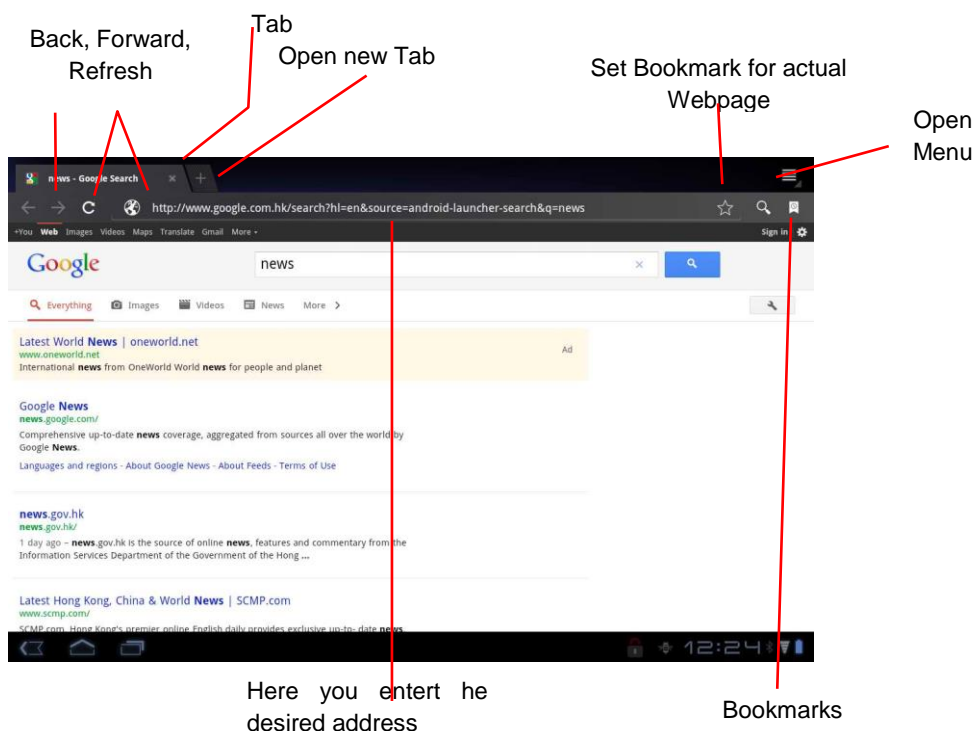

8-3 Contacts

To access the contacts:  >  **Contacts**

 If you do not have a Google account connected with the PAD, now you will do it on demand. See paragraph 8-1.

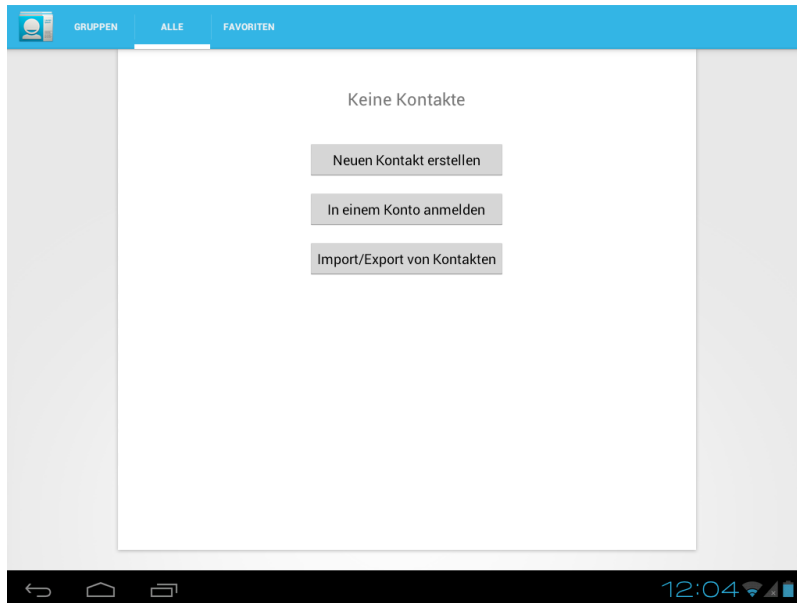


Create new contact: Create a contact. If no account is linked to the Contacts app can't sync these contacts.


Sign in an account: Configure a user account. E.G. Google Account or Exchange account.

Import / export contacts: Import vCard files from the internal User memory.

Adding a new contact

  Tap screen to enter the options for adding a new Contact.
Then tap **Done** to save the contact.

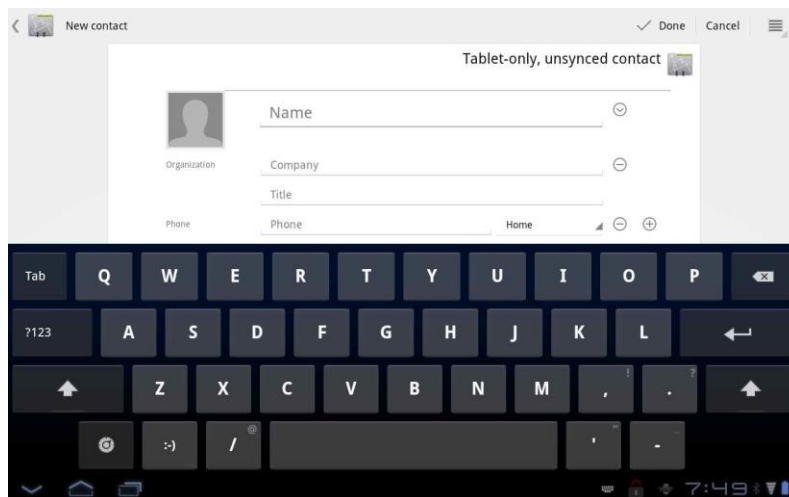


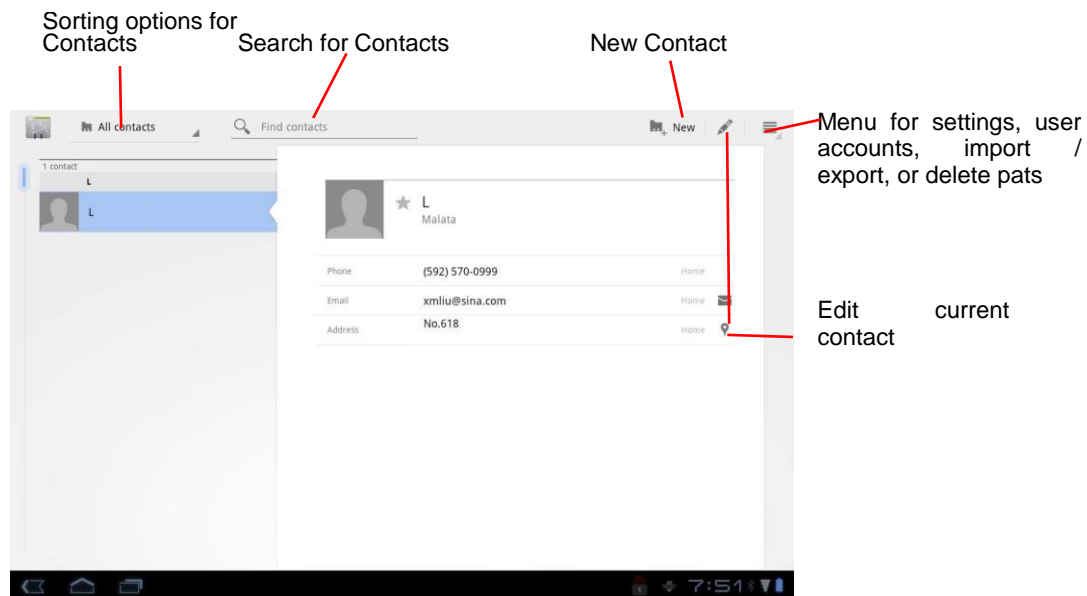



8-4 E-Mail

To access the e-mail function:  >  E-Mail Sign up.




Please make sure you have all the necessary information from your email provider.

   1. Use the onscreen keyboard to use the e-mail address and the corresponding password and tap **Next**:

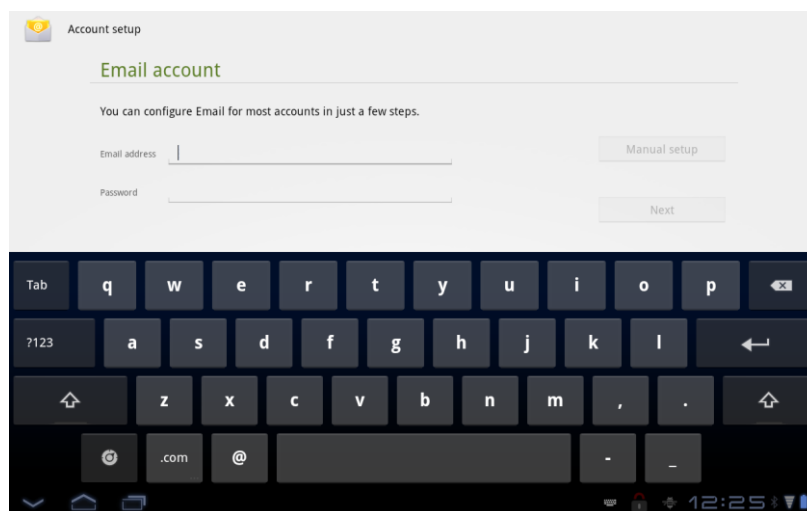

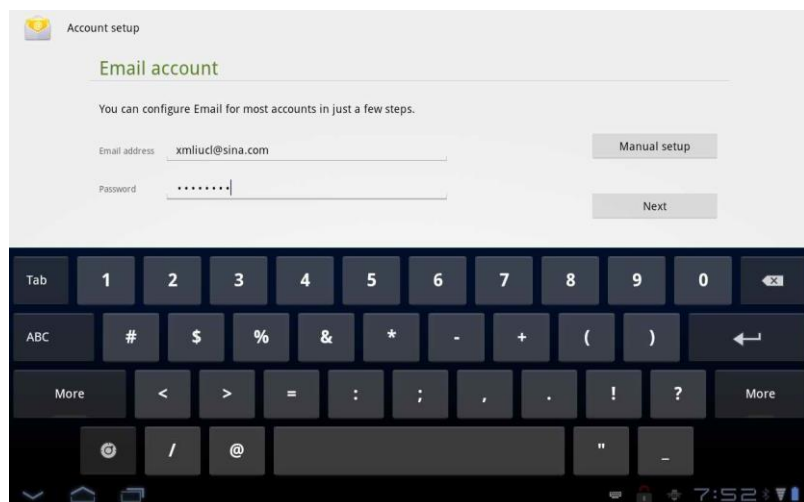

 
 
 
2. Select the input server, such as POP3. Then enter to the menu for the outgoing server.

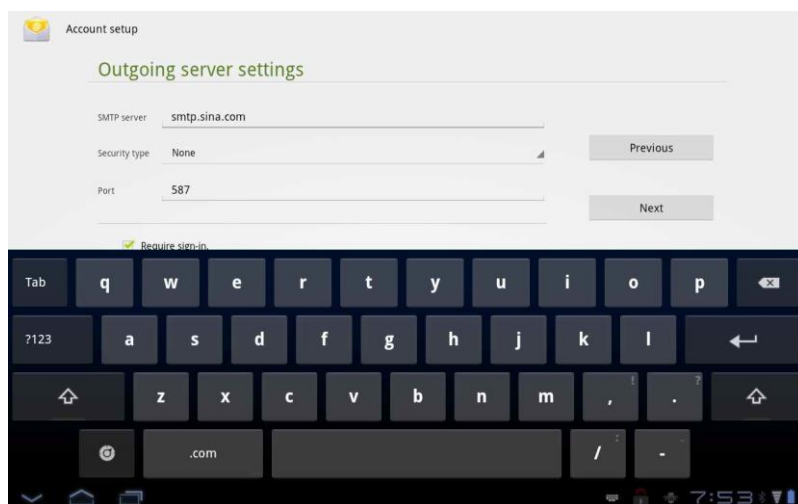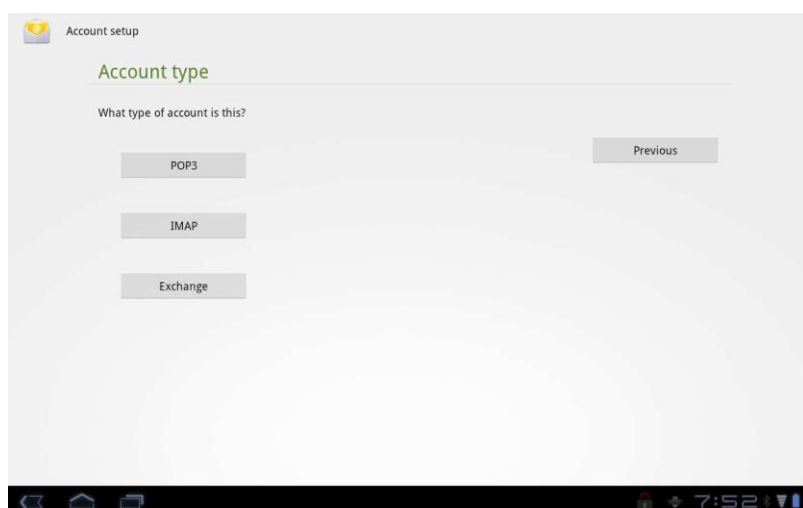




Make sure that you have the correct names provided for input and output servers.

   3. Re-check your account information and tap **Next** to the complete e-mail account settings. Then tap **Next** to go to the settings page, shown below:

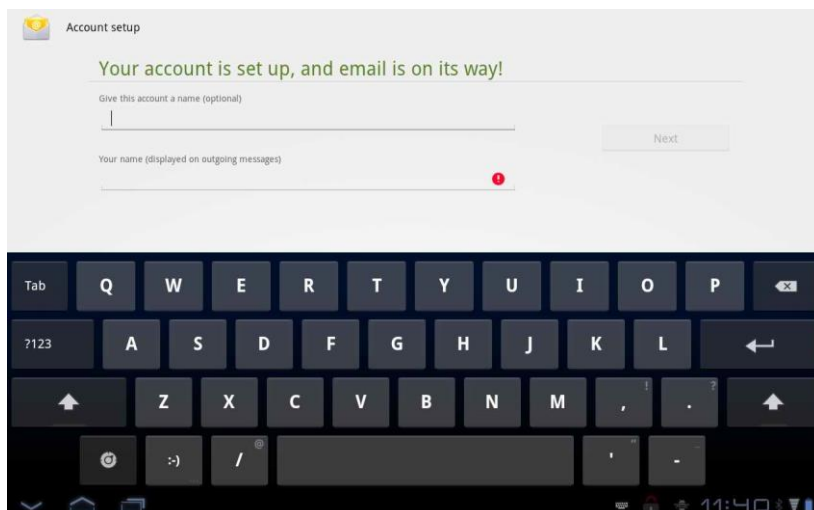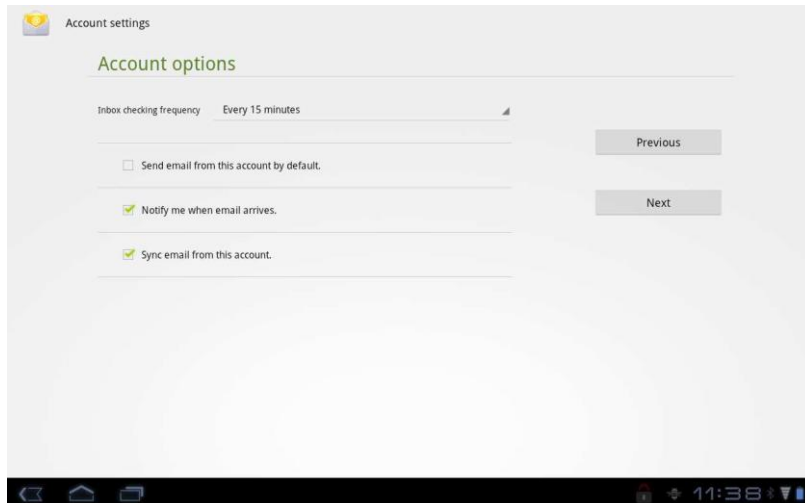

 4. Tap **Next**, after you enter the account name,
To access your e-mails:

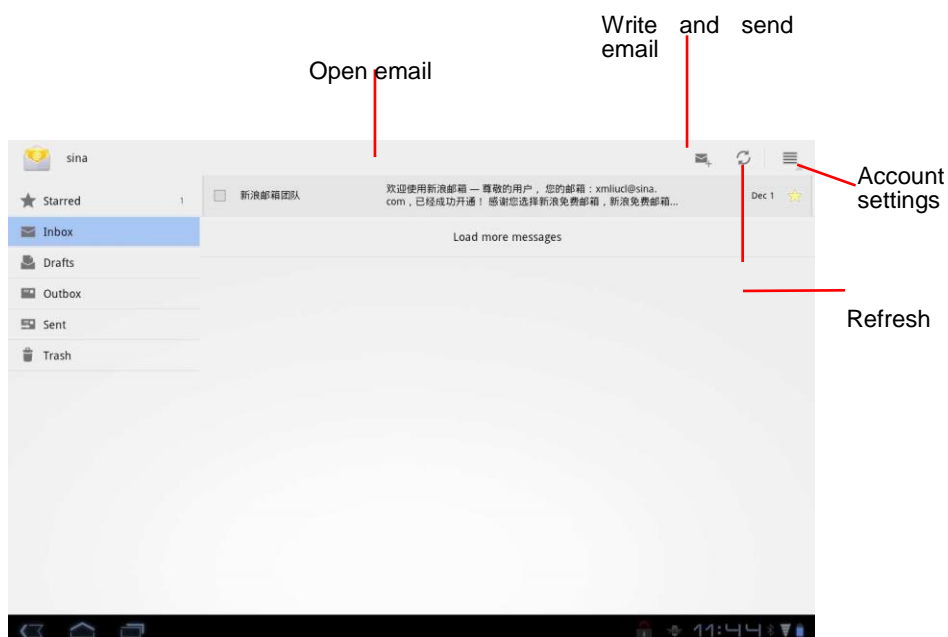


9 Fun

9-1 Camera

To access the camera:  >  **Camera**

 Taking pictures

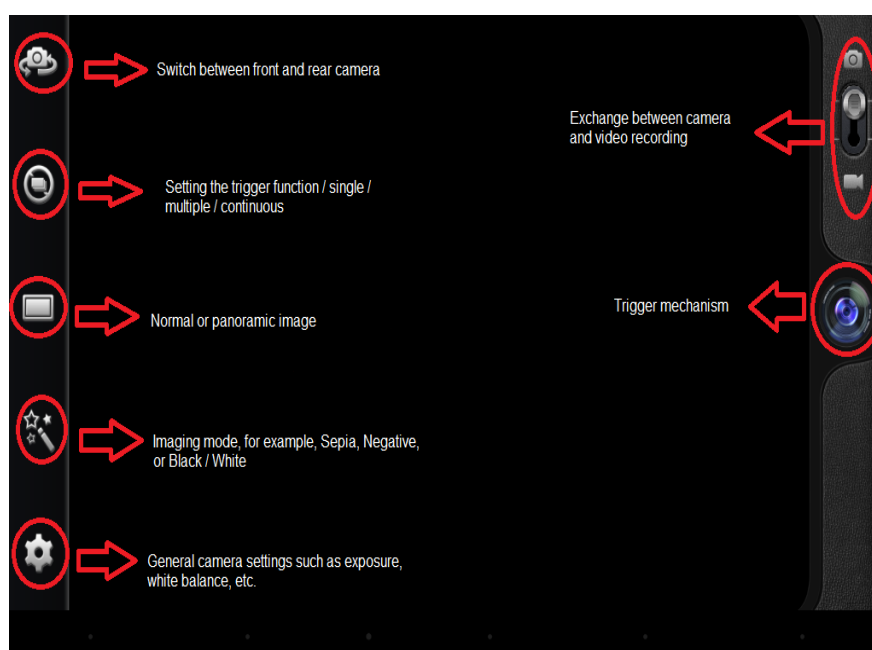

9-2 Gallery

To access the gallery:  >  Gallery

Display mode

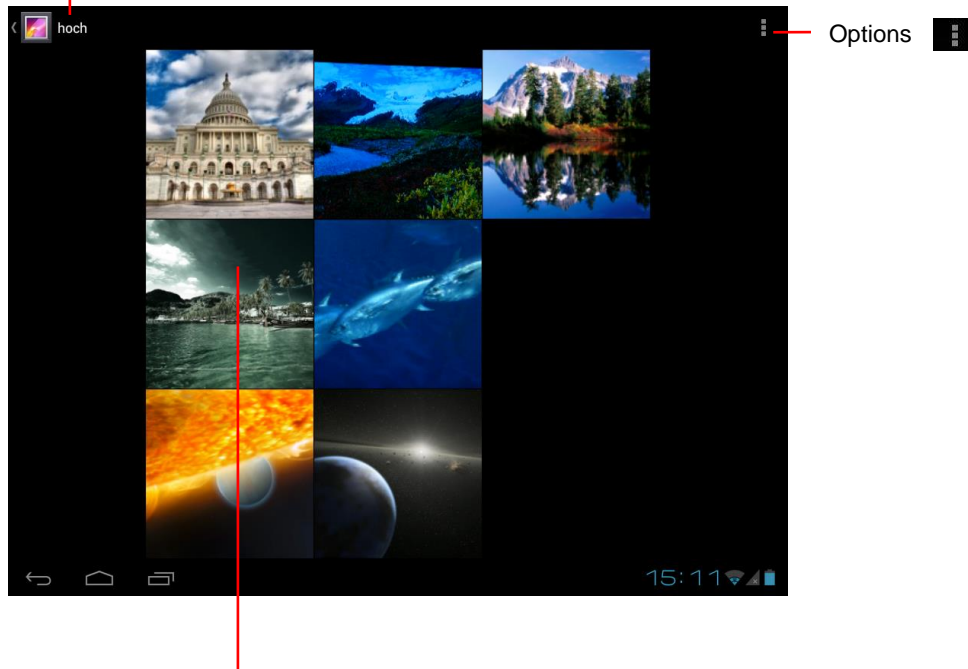




 Image Playback







: Tap to send the current file, for example via Bluetooth.

: Tap to delete the current image.

: Tap the menu for functions such details, rotate, crop to open, etc..


The touch screen supports finger gestures to functions such as zoom in / out and leaves can be performed.

Illustration	Gesture	Function	Abbildung	Gesture	Function
	Pull apart	Zoom in		Emphasize to the right	Next picture
	contract	Zoom out		Emphasize to the left	Previous picture


9-3 (Google) Play Music

To access your music:   Play Music

 
With (Google) Play Music you have the option to play your music from internal memory, an SD card or USB flash drive. You can likewise, if you have logged in with a Google account to download free tracks on Google Play Music or listen directly. As long as no songs stored in the device, or an SD card or USB connected, you get this note to Google Play Music appears.

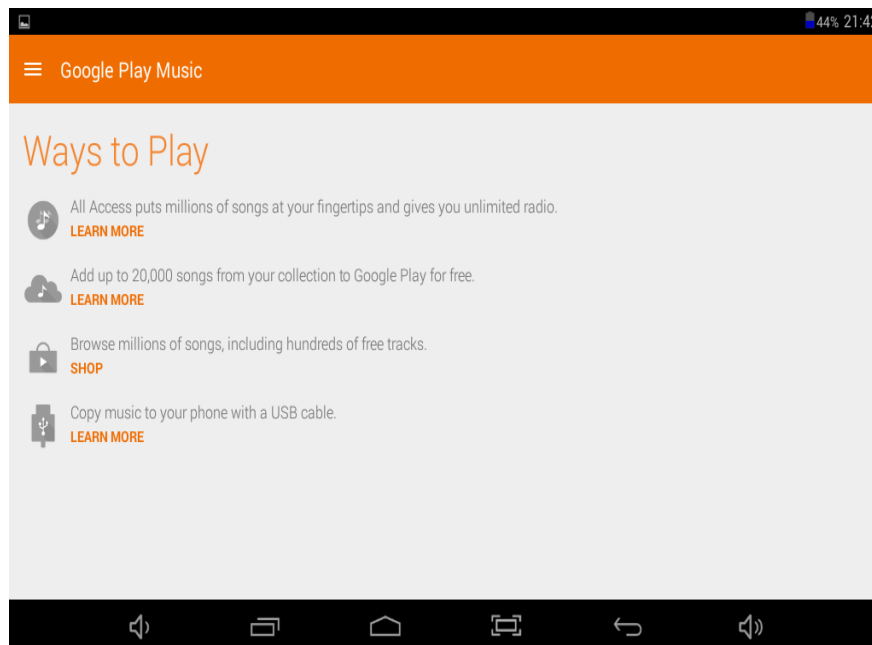

 
Once songs are stored in the device, or becomes available via SD card or USB stick, it is possible to "listen now" to access it.

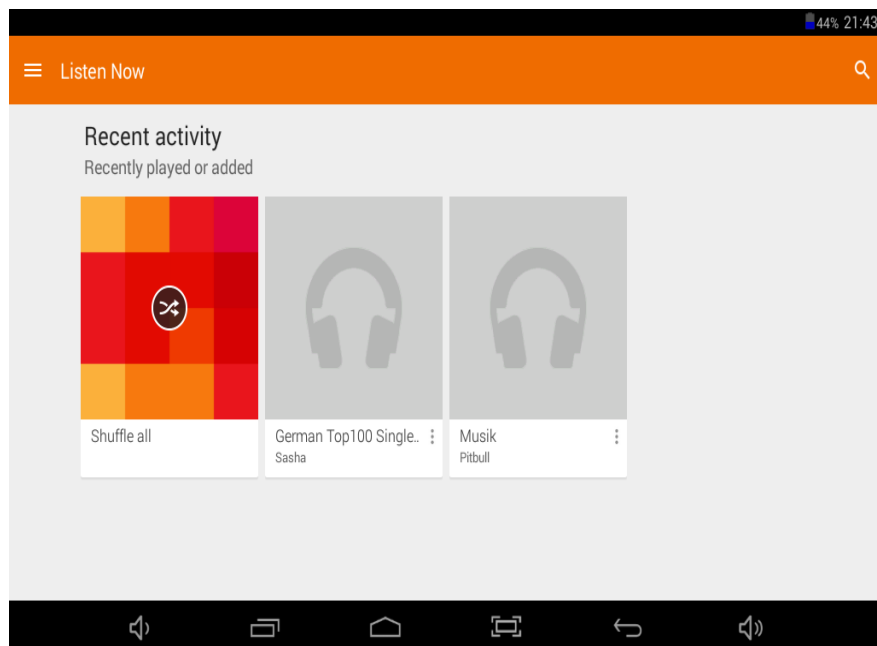

 
Now click on "My Library" access to your music tracks.

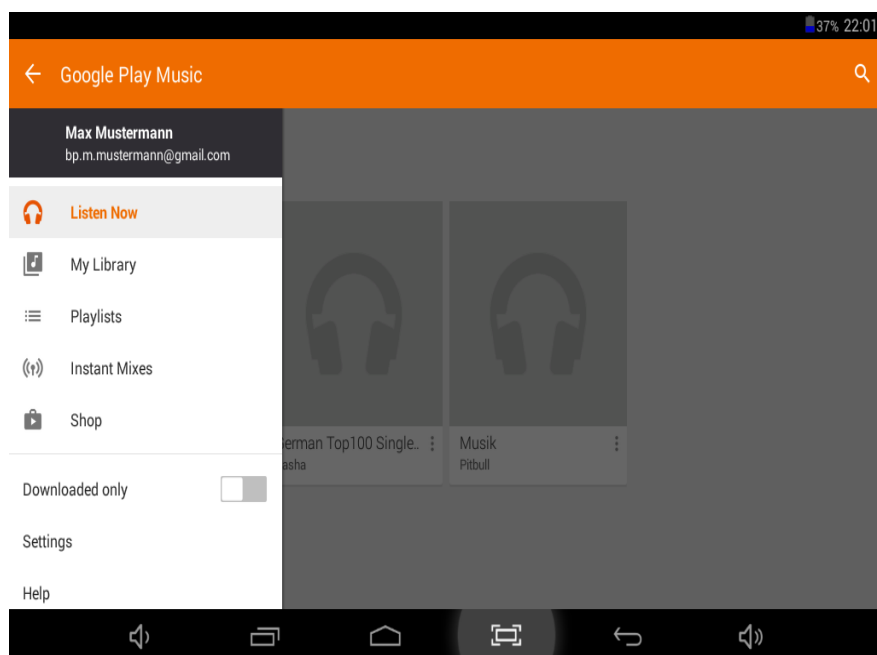

Then open the desired track by tapping.

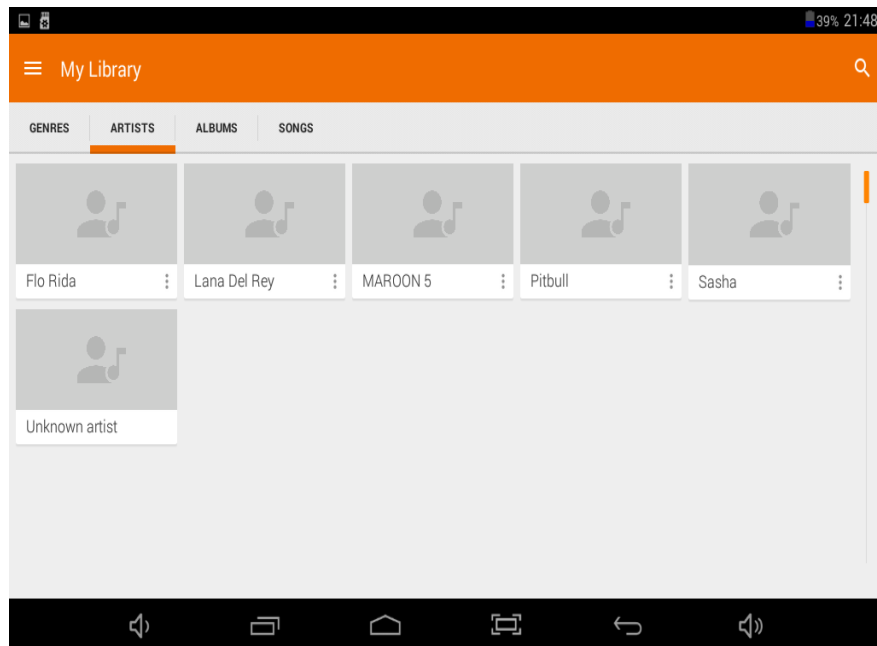 

And start playback.

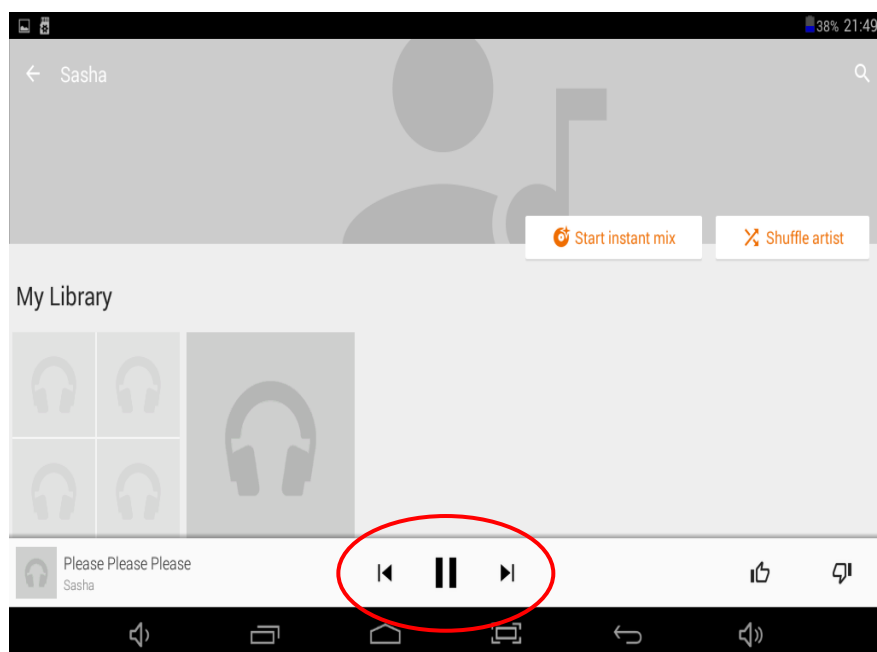 

9-4 Connecting headphones

Headphones can be connected to the PAD.



After a pair of headphones is connected to the PAD the speakers turn off automatically. Excessive volume can impair your hearing. They therefore reduce the volume before putting on the headphones, and then increase it to a level only then pleasant.

10 System connection

10-1 Connection to PC

About the micro USB port, you can use the included Micro USB cable to connect your pad to a PC to sync photos, contacts, data, etc..



This requires MTP drivers and Windows 7 installed on your PC. These are available on the Microsoft website.

11 Attachment

11-1 Troubleshooting

How do I stop the PAD when the system is not responding?

Hold down the power button for about eight seconds to force a power off.

How do I check the PAD if it does not turn on?

1. Connect the device to a power source if the battery power is low.
2. Make sure that the charge indicator lights up and the adapter is functioning properly.
3. Remove external devices.

What to do if water has got into the PAD?

1. Turn the PAD **NOT** on.
2. Do not press the power button, but disconnect the power cord, so as to eliminate the PAD. Remove all external devices and send the PAD to the service center.
3. Transport the PAD **NOT** again in the dirty carrying case.

How do I reset the device to factory settings?

Tap on: **Settings---Back up & reset---Factory data reset**, to reset the system to factory settings.

How do I increase the battery time?

1. Adjust the brightness of the touch screen display menu at an adequate level.
2. Turn down the volume.
3. Reduce the menu idle time until the unit automatically switches to the idle state.

What to do when the camera is out of focus?

Check that the lens is clean, and clean it if necessary with a soft cloth.

What to do if the SIM card can't be read? (only for 3G models)

Please turn off the device and insert the card again.

What to do if an error message about the Bluetooth connection appears?

Make sure that the time for entering the password hasn't been exceeded.

What to do if Bluetooth, Wi-Fi and 3G are disabled?

Verify if the airplane mode is on. If this is the case, cannot be activated Bluetooth, WiFi and 3G.

11-2 Specifications

Main function	
Chipset	A31s
Processor	ARM Cortex A7 Quad Core
Processor Speed	Max. 1,2 GHz
Main memory	1GB DDR3
Operating system	Android 4.4.2
Storage	
Storage	8 GB
Display	
Size	10,1"
Display Technology	TFT Display
Resolution	1024 x 600
Touch-Panel	
Type	Capacitive Touch-Panel
Camera	
Specifications	Front: 1,3 Megapixel; SXGA CMOS; Fixed Focus Rear: 3 Megapixel; QSXGA CMOS; Fixed Focus
WiFi	
WiFi	802,11 b/g/n
Audio/Video	
Audio	Stereo
Video	HD-Output (supports 1080 P Max)
Environmental conditions	
Operating	5-35 °C
Operating Humidity	35-85 %
Storage temperature	-20-55° C
Humidity in storage	20-93 %

Power supply	
Adapter	AC 100~240 V; DC 5 V/2.5 A
Output (maximum)	≤10 W
Battery Type	integrated Li-Ionen-Polymer Battery
Voltage	3,7 V
Inputs and Bays	
Audio Input	Headphone jack, speaker, integrated microphone
SIM card slot	Non-existent
Input for external Devices	Port for 3G USB Stick (3G USB stick not included), SD card up to 32GB (not included), mini-HDMI port
Device Properties	
Weight	Approx. 540 g
Dimensions	Approx. 252 x 152 x 10,5 mm



Design and specifications are subject to change without notice. The # symbol means that the feature is optional.

Hotline: + 49(0)5 11-270 496 90

Adresse und Kontaktdaten:

First Service Center
 Kleine Düwelstr. 21
 DE-30171 Hannover
 Fax: + 49 (0)5 11-161 25 36
 support@first-servicecenter.de

www.blaupunkt.de

**Declaration of Conformity in accordance with the German Act on
radio equipment and telecommunications terminal equipment
(FTEG)**

We, **Baros GmbH, Kleine Düwelstr. 21, 30171 Hannover**

declare under our sole responsibility that the product

Blaupunkt Endeavour 101G / 10BPG0

is certified as conforming to the following standards and/or other normative documents:

Health and safety pursuant to § 3 (1) 1. (Article 3 (1) a))

EN 60950-1:2006+A11:2009+A1:2010+A12:2011

EN 62311:2008

Electromagnetic compatibility § 3 (1) 2, Article 3 (1) b))

The provisions of Directive 2004/108/EC in accordance with the following standards are met:

EN 301 489-1 V1.9.2 (2011-09), EN 301 489-17 V2.1.1 (2009-05),

EN 55022:2010, EN 55024:2010, EN 61000-3-2:2006+A1:2009+A2:2009, EN 61000-3-3:2008

Measures for the efficient use of the radio frequency spectrum

Air interface of radio systems pursuant to § 3 (2) (Article 3 (2))

ETSI EN 300 328 V.1.7.1 (2006-10)

Power supply: model K15S050200B

Annex I to Directive 2006/95/EC is observed

EN 60950-1:2006+A11+A1+A12

EN 60065:2002+A1+A11+A2+A12

Eco-design conformity assessment

EC Regulation no. 278/2009 and Directive 2009/125/EC

We hereby declare that all essential test series have been carried out and that the product specified above conforms to the essential requirements of Directives 1999/5/EC and 2006/95/EC.

RoHS compliance

We hereby declare that all manufactured products are RoHS-compliant in accordance with Directive 2011/65/EU of the European Parliament and of the Council of 08.06.2011 on the restriction of the use of certain hazardous substances in electrical and electronic equipment.

Hannover, Oktober 05, 2014

(Place, date of issue)


(Alexander Osberger, Managing Director)